

ELVITA



User manual
Tumble dryer
CTT7100V

Thank you

for your trust and the purchase of our product. This user manual is supplied to help you use this product. The instructions should allow you to learn about your new product as quickly as possible.

Make sure you have received an undamaged product. If you do find transport damage, please contact the seller from which you purchased the product, or the regional warehouse from which it was supplied.

ELVITA

Language: en-GB, Publication date: 2021-03-09

This document and its content, including written material and images, are the property of Elon Group AB. You may not copy, reproduce, modify, republish or distribute this document or any of its content without express written permission from Elon Group AB. © 2020, Elon Group AB. All rights reserved.



Warranty

Consumer warranty regarding quality of product applies.

ELVITA

Contents

SAFETY	6
Admonitions	6
Intended use	6
Safety for children and people with disabilities.....	6
General safety.....	7
Safety during installation	7
Safety during operation	8
Safety during maintenance	9
Disposal.....	10
QUICK START	11
GETTING STARTED	12
Installation.....	12
Getting to know your tumble dryer.....	12
Controls.....	12
Symbols on the display	12
Accessories.....	13
Use the child lock	13
Find the model code.....	13
Before first use	14
Run a drying cycle with minimal load	14
DRYING	15
Before each drying cycle	15
Run a drying cycle	15
After each drying cycle	16
Clothing care labels for tumble drying	16
Reference weight for different types of clothes	16
Options, settings and functions	17
Use the Anti-crease option.	17
Use the Delay option.....	17
Use the Hygiene option	18
Use the Silence option.....	18
Change the Dryness level	18
Use the My cycle function	18
Mute and unmute the acoustic signal	18
Turn on and turn off the lamp.....	18
Drying programmes	18
Bed linen	18
Cold	19
Cotton Extra dry	19
Cotton Iron dry.....	19
Cotton Standard dry.....	19
Jeans.....	20

Mix	20
My cycle	20
Shirts.....	20
Refresh	21
Synthetics Extra dry	21
Synthetics Standard dry	21
Hot.....	21
Wool	21
CLEANING AND MAINTENANCE	23
Clean the exterior.....	23
Clean the tumble dryer	23
Clean the door filter	23
Empty the water container.....	24
Clean the base filter	25
Clean the heat exchanger	25
TROUBLESHOOTING	27
Troubleshooting.....	27
INSTALLATION	29
Unpack the tumble dryer	29
Installation area	29
Level the tumble dryer	31
Position the drain hose into a sink.....	31
APPENDIX	33
Technical specifications.....	33
Energy efficiency	33
EU directives and standards.....	34

SAFETY

Carefully read the instructions before you install and use the product. Save the instructions and keep them near the product for future reference. All kinds of warranties shall be invalid if these instructions are not followed.

Admonitions

**WARNING!**

Used when there is a risk for personal injury.

**CAUTION!**

Used when there is a risk for damage to the product.

**NOTE!**

General information that you should be aware of.



Helpful tips that you may find useful.

Intended use

This product is

- intended for drying typical amounts of household laundry, which have been washed with water.
- designed only for private use. It is not suitable for commercial use or shared use (for example by several families in an apartment building).
- intended for indoor use only.

Use this product only as described in the user manual. Any other use is deemed improper and may result in damage to property or even personal injury.

The manufacturer accepts no liability for damage caused by improper use.

Safety for children and people with disabilities

**WARNING!**

Only let the following groups use the product if they are supervised or if instructions are provided to them about how to use the product in a safe way. They must understand the hazards involved.

- Children. (Children younger than 8 years old must be continuously supervised.)
- People with reduced physical, sensory or mental capabilities.
- People with lack of experience and knowledge.

**WARNING!**

- Do not let children play with the product.
- Do not let children clean the product without supervision.

**WARNING!**

Always close the door after use, and always check inside before every operation, as there is a risk that:

- Animals and children may climb into the product.
- Children may hide things inside the product.

General safety

**WARNING!**

Risk of electric shock!

- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not pull forcefully at the power cord. Pull the power plug instead.
- Do not bend, clamp or damage the power cord and the power plug.
- Do not handle the power plug with wet hands.

**WARNING!**

Risk of explosion and fire!

- Do not pile, stack or store oil-affected items in the product. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer: The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire.
- The product contains an environmentally friendly but flammable R290 refrigerant. Keep away from open flame and other sources of ignition.
- Do not clean this product with industrial chemicals.

**WARNING!**

- Condensed water is not drinking water. It can cause health problems in both people and animals if consumed.

**CAUTION!**

- Do not lean on the opened door of the dryer.
- Do not overturn the product during maintenance or normal use.
- Do not spray water directly on the product.

**CAUTION!**

Move the product cautiously. Improper handling of the product may result in injury. When moving the product:

- Do not lift, carry or in other way transport the product without assistance. The product is heavy.
- Do not use protruding parts of the product to lift it.
- Do not use the door of the product as a handle when lifting or steering the product.
- It is preferable to move the dryer in upright position. Do not tilt the dryer more than 30°.

Safety during installation

Local laws and regulations for electrical installations must be followed.

**WARNING!**

Keep all packaging material well away from children. There is a risk of suffocation!

**WARNING!**

- Remove all packaging material before using the product.

**WARNING!**

- Before installing the product, check for any externally visible damage. Do not install or use a damaged product.
- Do not disassemble or install the product without instruction or supervision.

**WARNING!**

Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

**WARNING!**

- Do not install the product behind a lockable door, a sliding door, or a door with a hinge on the opposite side of the product, in such a way that the product cannot be opened fully.
- If this product is to be stacked on top of a washing machine, a stacking kit must be used (ordered separately). To avoid hazards, only the manufacturer, its service agent, or a similarly qualified technician may stack the products.

**WARNING!**

Risk of electric shock!

- This products corresponds to protection class I and must be connected to a plug with a properly installed protective conductor.
- The power cord of the product must be connected to an earthed socket. If in any doubt, have the household wiring system tested by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (for example electric shock).
- Before plugging in the product, make sure the connection parameters of the product match the mains electricity supply. This information (fuse rating, voltage and frequency) is found on the rating plate. If in any doubt, consult a qualified electrician.
- Do not connect the product to the mains power by an extension cord, a multi-socket adapter, or similar.
- Make sure that the power plug always is accessible so that the product can be disconnected from the mains.

**WARNING!**

Risk of electric shock!

- Do not use external timers or separate remote control systems to control the product.

**CAUTION!**

- Remove all obstacles on the transport route to the installation location.
- Do not install the product in a room where there is a risk of frost occurring. The product may not operate properly at temperatures below the freezing point, and there is a risk of damage to the product if the condensed water is allowed to freeze in the pump and the hoses.
- Do not expose the product to direct sunlight.
- Do not install the product in a humid or very wet environment.

Safety during operation

**WARNING!**

Before using the product, make sure it is correctly installed.

**WARNING!**

Risk of explosion and fire!

- Remove all items from the pockets, especially lighters, matches, and similar objects, before drying clothes.
- If it cannot be avoided to dry items that have been soiled with substances such as cooking oil, vegetable oil, hair care products, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers, such items must be washed in hot water with an extra amount of detergent before drying. This will reduce, but not remove, the hazard.
- Do not use the product if it has been cleaned with industrial chemicals.
- Do not stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Make sure that the openings of the product not are obstructed.
- Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause a heat build-up which would interfere with the operation of the product.
- Lint must not to be allowed to accumulate around the product.

**WARNING!**

Risk of explosion and fire! Do not dry the following in the product.

- Unwashed items.
- Items such as
 - foam rubber (latex foam),
 - shower caps
 - waterproof textiles,
 - rubber backed articles and
 - clothes or pillows fitted with foam rubber pads.
- Articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances such as
 - wax,
 - oil,
 - paint,
 - gasoline,
 - degreasers,
 - dry cleaning solvents,
 - kerosene.

**WARNING!**

- If the product appear to be abnormally warm, unplug it from the mains immediately.

**WARNING!**

- Do not use the dryer without the water container.
- Do not operate the dryer without the door filter and the base filter.

**CAUTION!**

- Do not load the product with more laundry than the maximum load specified in the user instructions. See the related chapter in the instructions. Note that the maximum load is different for different drying programmes.
- Always spin the clothes before drying them. Do not dry dripping wet clothes.

Safety during maintenance

**WARNING!**

Risk for injury! Do not touch the heat exchanger directly.

**CAUTION!**

- Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners to clean this product. Plastic surfaces and other parts may become damaged.
- Wear gloves when cleaning the product.
- Always reinstall filters after cleaning. Do not operate the product without any of the filters.

Disposal



Dispose of packaging in an environmentally-friendly manner. Recycling packaging, while observing national and local regulations, can reduce the consumption of raw materials and the amount of waste in landfill sites.


This product is marked in compliance with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE). The symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact the relevant municipal body in charge of waste management, your household waste disposal service or the store where you purchased the product.


QUICK START

Before drying


1

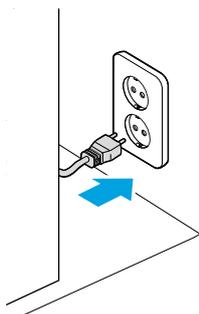

2

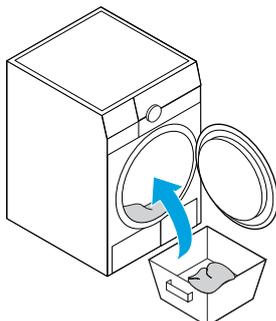


3

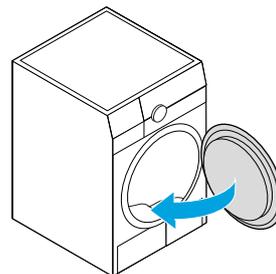


Drying


1

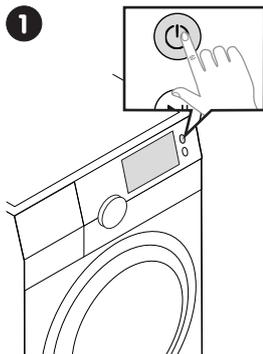


2

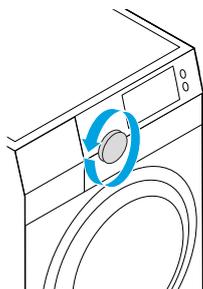

3

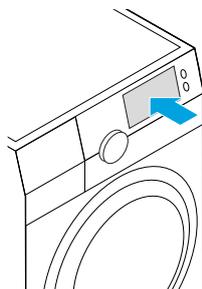


4

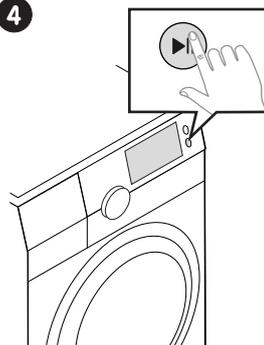


After drying


1

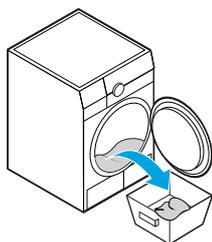


2

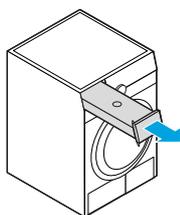


3

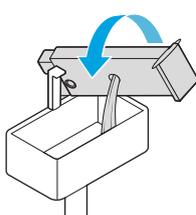

4

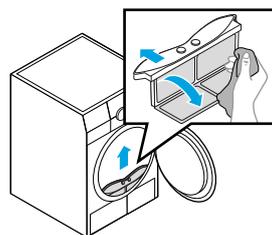

5

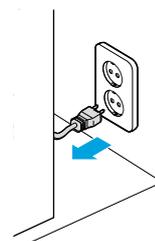


GETTING STARTED

Installation

See section "Installation", [page 29](#)

Getting to know your tumble dryer

Controls

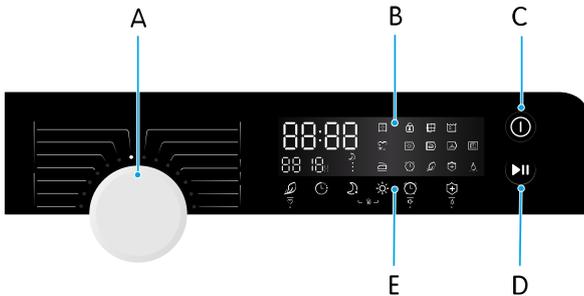

- A. Programme selector
- B. Display
- C. On/Off
- D. Start/Pause
- E. Options, settings and functions

Symbols on the display



Dryness level: Extra dry



Child lock



Clean the filters



Empty the water container



Dryness level: Standard dry



Cycle phase: Drying



Cycle phase: Iron dry



Cycle phase: Cooling



Cycle phase: Completed



Dryness level: Iron dry



Time



Anti-crease




Hygiene



Lamp

Accessories

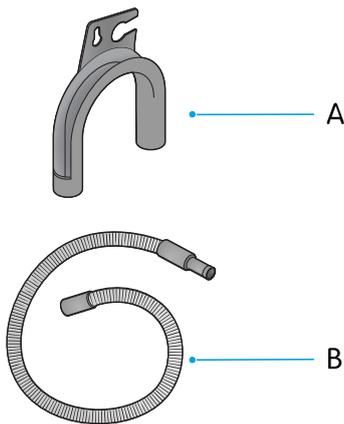

- A. Drain hose holder
- B. Drain hose extension with connector

Drain hose holder

For securing the hose and avoiding kinks, for example when placing the hose over the edge of a sink.

Drain hose extension with connector

For extending the drain hose.


Use the child lock

Activate the child lock to avoid accidental operation by children.

The child lock can only be activated when a drying programme is active.

1. Touch and hold  and  for 3 seconds to activate the child lock. All buttons except  and  are locked.  is displayed.
2. Touch and hold  and  for 3 seconds to deactivate the child lock. The child lock is turned off and  disappears.

Find the model code

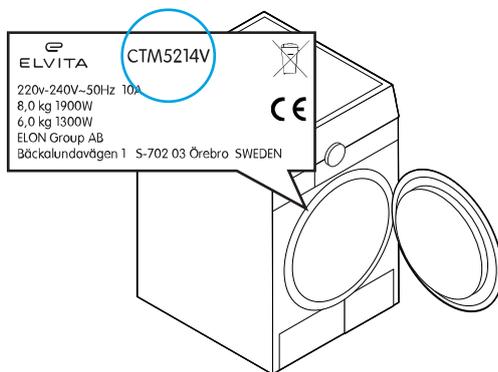

The model code is printed on a label on the product. You need the code to find the complete and most recent information, service and support for your product model.



NOTE!

This product and label text are examples. Your product and text may have a different look and content.

Before first use

Run a drying cycle with minimal load


Before you use the dryer the first time, leave it to stand for at least two hours after transporting it.

1. Clean the inside of the drum with a soft cloth.
2. Put some clean rags into the drum.
3. Plug in the dryer into the socket and press .
4. Select the Refresh programme and press .
5. After the programme has completed, remove the rags.
6. Clean the door filter. See section "Clean the door filter", [page 23](#).
7. Empty the water container. See section "Empty the water container", [page 24](#).

Your dryer is ready for use.

DRYING

Before each drying cycle

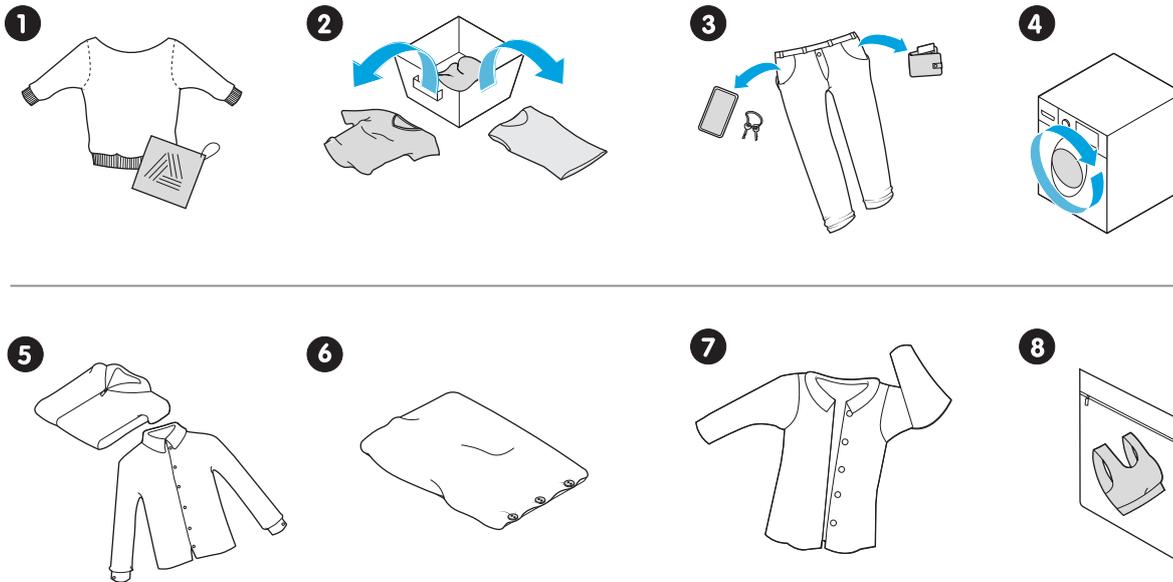

1. Check the clothing care labels, see section "Clothing care labels for tumble drying", [page 16](#).
2. Sort the laundry according to fabric type and drying programme. Make sure not to exceed the maximum load for the drying programme that you plan to use, see section "Reference weight for different types of clothes", [page 16](#) and section "Drying programmes", [page 18](#).
3. Remove all items from the pockets.
WARNING! Items such as matches and lighters are fire hazards.
4. If the laundry is dripping wet, spin it thoroughly in the washing machine.



High spin speed shortens the drying time and saves energy.

5. Close zips, hooks, eyelets and buttons, etc. Tie fabric belts and similar.
6. Close duvet covers and pillow cases to prevent small items from being rolled up in them.
7. Leave jackets open and undo any long zips so that textiles dry evenly.
8. Place any bra with underwiring in a washing bag.

Run a drying cycle



CAUTION!

Do not dry dripping wet laundry.

1. Plug in the power plug to the socket.



If a switch is used with the socket, use the switch to turn on the power supply.

2. Load the dryer.
CAUTION! Maximum load depends on the programme.
3. Press  to turn on the power.
The display lights up.

4. Turn the programme selector to select a programme.
NOTE! When drying normal cotton laundry, Cotton Standard is the most energy-efficient program.
NOTE! Over-dried clothes tend to wrinkle and crease. Select settings with care.
5. Select functions or options if needed.
6. Press  to start the dryer.
The drum starts to rotate. The cycle phase and the remaining time are displayed. The compressor and the water will generate some noise. This is entirely normal.
7. When the drying programme is completed, remove the load.
WARNING! Only open the door after the drying programme is completed, to avoid scalding by hot steam or an over-heated dryer.



Thick and multi-layered clothes can be difficult to dry. If you feel that the laundry still is too damp, select a timed programme for subsequent drying.

The anti-crease function starts if the load is not removed. The load can be removed at any time during the anti-crease cycle.

8. Press  to turn off the power.
9. Remove the plug from the socket.



If a switch is used with the socket, use the switch to turn off the power supply.

After each drying cycle

Follow these steps to maintain proper function and keep down the drying time and the energy consumption.

1. Clean the door filter, see section "Clean the door filter", [page 23](#).
2. Empty the water container, see section "Empty the water container", [page 24](#). Not applicable if the drain hose is connected directly to an external drain.

Clothing care labels for tumble drying

Check the care labels of the laundry items to help you select a suitable drying programme.



Suitable for tumble drying.



Dry at normal temperature.



Dry at low temperature.



Do not tumble dry.

Reference weight for different types of clothes

The reference weight of dry clothes (weight per item).



Sweater, mixed
(800 g)



Jacket, cotton
(800 g)



Jeans
(800 g)



T-shirt, cotton
(180 g)



Shirt, cotton
(300 g)



Work clothes
(1120 g)



Nightclothes
(200 g)



Underwear, cotton
(70 g)



Socks, mixed-weave
(50 g)



Single bedsheet, cotton
(600 g)



Bath towel, cotton
(900 g)

Options, settings and functions



Anti-crease, My cycle

- Anti-crease: Prevents the laundry from getting creases. See section "Use the Anti-crease option.", [page 17](#).
- My cycle: Saves your favourite combination of washing programme and options. See section .



Child lock

Prevents accidental use of the machine. See section "Use the child lock", [page 13](#).



Delay

Delays the start of the drying programme by a specified amount of time. See section "Use the Delay option", [page 17](#).



Dryness level

Sets a dryness level. The amount of time required to reach the specified level will differ between programmes. See section "Change the Dryness level", [page 18](#).



Hygiene, Lamp

- Hygiene: Increases the heating time to remove harmful bacteria. See section "Use the Hygiene option", [page 18](#).
- Lamp: Turns on and turns off the lamp. See section "Turn on and turn off the lamp", [page 18](#).



Silence

Reduces the noise of the machine. See section "Use the Silence option", [page 18](#).



Time, Mute / unmute

- Time: Adjusts the drying time. See section .
- Mute / unmute: Mutes and unmutes the acoustic signal. See section "Mute and unmute the acoustic signal", [page 18](#).

Use the Anti-crease option.

1. Turn the programme selector to select a programme.
2. Touch  to cycle through the available anti-crease times (30 min, 60 min, 90 min). The default time is 60 min.
3. Press 



The laundry can be removed at any time during the anti-crease phase.

Use the Delay option

1. Turn the programme selector to select a programme.
2. Change settings and select options if needed.
3. Touch  to cycle through the available delay times.
4. Touch  .
The drying cycle will start after the delay time has passed.

**NOTE!**

Press  to pause the countdown of the delay time. Press  to cancel the delay option.

Use the Hygiene option

**NOTE!**

Use this option with caution for light, thin or delicate laundry.

1. Turn the programme selector to select a programme.
2. Touch .

NOTE! Touch  again to cancel.

Use the Silence option

1. Turn the programme selector to select a programme.
2. Touch .
3. Press .

Change the Dryness level

The dryness level can be adjusted for all programmes except Cotton Iron dry, Wool, Cold, Refresh, and Hot.

1. Turn the programme selector to select a programme.
2. Touch  to cycle through the available dryness levels (iron dry, standard dry, extra dry).

Use the My cycle function

You can save a frequently used programme for quick access.

1. Select a programme and the settings and options you want to use.
2. Touch and hold  for 3 seconds to add the current programme and settings to the memory.

Your programme and settings are now stored and can be used by turning the programme selector to **My Cycle**

Mute and unmute the acoustic signal

**NOTE!**

The acoustic signal will not sound when it is muted.

1. Touch and hold  for 3 seconds to mute the acoustic signal.
2. Touch and hold  for 3 seconds to unmute the acoustic signal.

The setting will be remembered until the next reset.

Turn on and turn off the lamp

1. Touch and hold  for 3 seconds to turn on the lamp.
NOTE! The lamp will be lit for 3 minutes. The lamp will be lit for 1 minute if the door is open.
2. Touch and hold  for 3 seconds to turn off the lamp.

Drying programmes

Bed linen

For bed linen, bed sheets or other large items.

Default time	2:50
Maximum load	5.0 kg
Options	<ul style="list-style-type: none"> • Anti-crease • Delay • Dryness level • Hygiene • Silence

Cold

To air individual items without heating.

Default time	0:10
Maximum load	-
Options	<ul style="list-style-type: none"> • Delay • Time

Cotton Extra dry

For cotton laundry that you want to dry completely and store away immediately. Recommended for thick and multi-layered articles, for example jackets.

Default time	4:48
Maximum load	10.0 kg
Options	<ul style="list-style-type: none"> • Anti-crease • Delay • Dryness level • Hygiene • Silence

Cotton Iron dry

For single layer cotton laundry that is to be ironed. Leaves the laundry slightly damp to improve the result of the ironing.

Default time	2:20
Maximum load	10.0 kg
Options	<ul style="list-style-type: none"> • Anti-crease • Delay • Dryness level (Iron dry, Standard dry)

Cotton Standard dry

For single or multi-layer cotton laundry that you want to dry completely and store away directly.



NOTE!

Save energy! Cotton Standard dry  is the most energy-efficient programme for drying wet cotton laundry.

Default time	2:55
Maximum load	10.0 kg
Options	<ul style="list-style-type: none"> • Anti-crease • Delay • Dryness level • Hygiene • Silence

Jeans

For jeans or leisure clothes. High spin speed.

Default time	2:40
Maximum load	5.0 kg
Options	<ul style="list-style-type: none"> • Anti-crease • Delay • Dryness level • Hygiene • Silence

Mix

For fabrics that are a mix of cotton and synthetics.

Default time	1:40
Maximum load	4.0 kg
Options	<ul style="list-style-type: none"> • Anti-crease • Delay • Dryness level • Hygiene • Silence

My cycle

Define and save your favourite combination of drying programme and options. See section "Use the My cycle function", [page 18](#)

Shirts

For easy care laundry, for example anti-crease shirts and blouses.



Take care not to wrinkle and fold the clothes when you place them in the dryer. Once dried, quickly remove the clothes from the dryer and hang on hangers.

Default time	1:00
Maximum load	1.0 kg
Options	<ul style="list-style-type: none"> • Anti-crease • Delay • Dryness level • Hygiene • Silence

Refresh

To refresh clothes, for example clothes kept in a closed environment for a long time, or to remove odors.

Default time	0:20
Maximum load	1.0 kg
Options	<ul style="list-style-type: none"> • Delay • Time

Synthetics Extra dry

For thick or multi-layer synthetic fabrics. Aims to dry the fabric completely.

Default time	1:30
Maximum load	4.0 kg
Options	<ul style="list-style-type: none"> • Anti-crease • Delay • Dryness level • Hygiene • Silence

Synthetics Standard dry

For thin synthetic fabrics, which are not to be ironed. For example easy care shirts, baby cloths or socks.

Default time	1:20
Maximum load	4.0 kg
Options	<ul style="list-style-type: none"> • Anti-crease • Delay • Dryness level • Hygiene • Silence

Hot

To dry individual items or to complete the drying process of voluminous items, for example pillows, or items made of fabrics with different drying behaviours, for example jackets.

Default time	0:10
Maximum load	-
Options	<ul style="list-style-type: none"> • Anti-crease • Delay • Silence • Time

Wool

For machine dryable wool products.

Default time	2:05
Maximum load	1.0 kg
Options	<ul style="list-style-type: none">• Delay• Time

CLEANING AND MAINTENANCE

Correct maintenance of your product can extend its working life.



WARNING!

Unplug the machine before starting maintenance.



CAUTION!

Do not use alcohol, solvents or chemical products to clean the product.

Clean the exterior

- When needed, clean the surface with diluted non-abrasive neutral detergents.
- If there is any water overflow, use a cloth to wipe it off immediately.




CAUTION!

- Do not use sharp cleaning tools.
- Do not use formic acid or solvents, such as alcohol and chemical products, etc.


Clean the tumble dryer

Use a damp cloth.


1

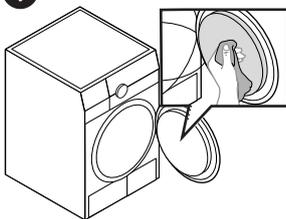


2

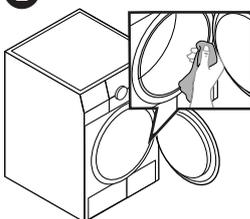


3

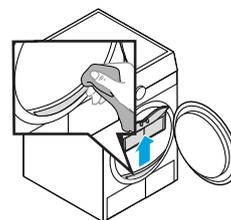

4

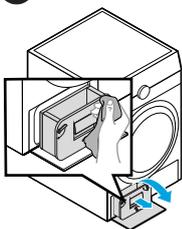

5

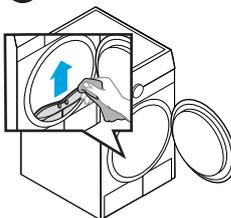


1. Clean the door, especially the inside window.
2. Clean the sealing around the door opening.
3. Clean the humidity sensor inside the drum.
4. Remove and clean the base filter.
5. Remove and clean the door filter.

Before starting the dryer, dry all parts with a soft cloth.

Clean the door filter


Do this after each drying cycle.

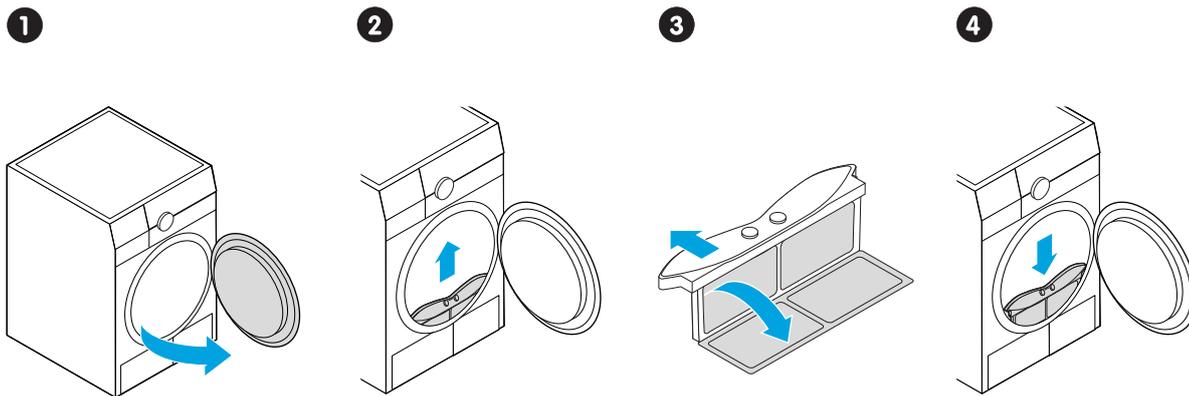

1. Open the door.
2. Remove the filter.
3. Open the filter and remove the lint. If needed, clean the filter in water and dry the filter thoroughly.
4. Install the filter.
CAUTION! Make sure to install the filter in the correct orientation.

Empty the water container


Do this after each drying cycle.

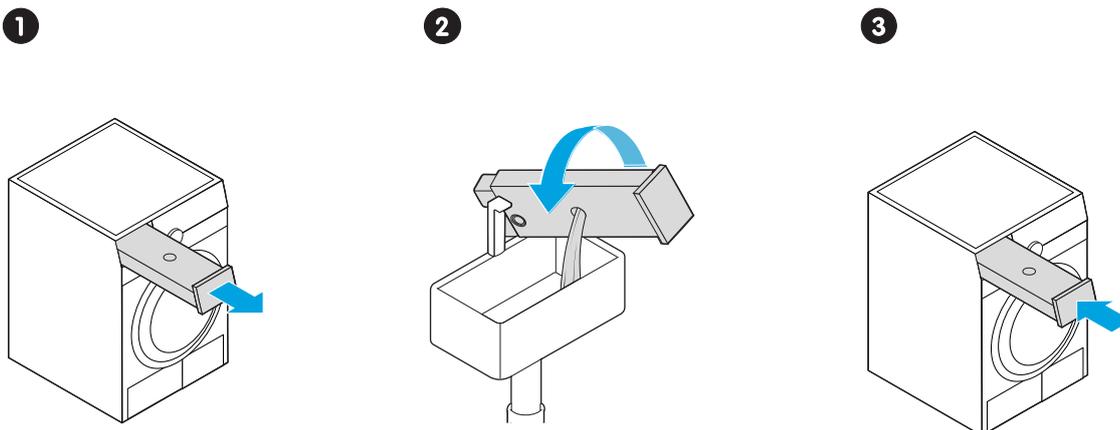

1. Pull out and balance the water container with both hands.
2. Tilt the water container and pour out the condensate water into the basin.
WARNING! Do not drink the condensate water.
3. Install the water container.

Clean the base filter

Do this after every fifth drying cycle.

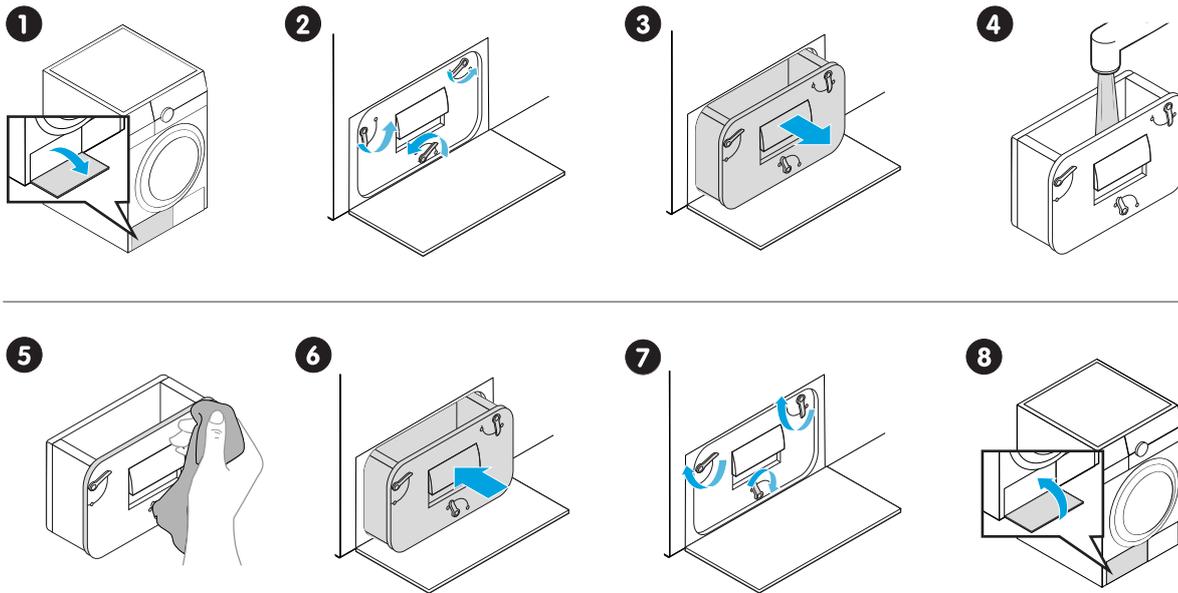

1. Open the cover.
2. Unlock the 3 locking levers.
3. Grip the filter handle and remove the filter.
4. Clean the filter. If needed, rinse the filter in water and dry it thoroughly afterwards.
5. Clean the rubber sealing, both at the filter and at the handle.
6. Install the filter.
7. Lock the 3 locking levers.
8. Close the cover until you hear a click.


Clean the heat exchanger

To be performed when necessary, usually once every 6 months.



NOTE!

Clean the heat exchanger regularly to maintain shorter drying times and a lower energy consumption.

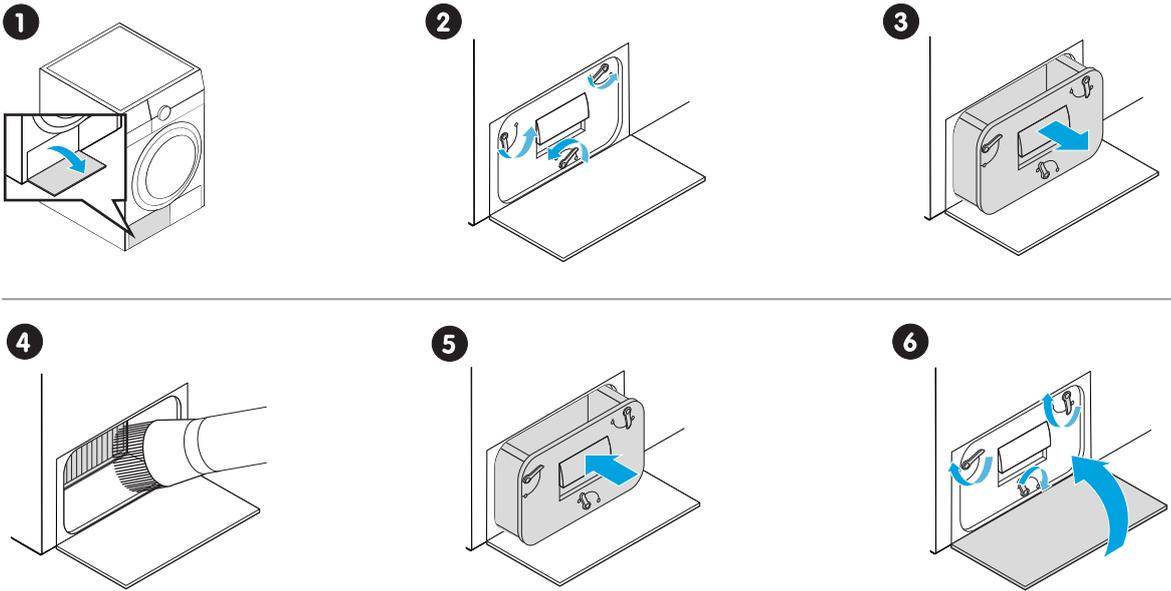

1. Open the cover.
2. Unlock the 3 locking levers.
3. Grip the filter handle and remove the base filter.
4. Remove the lint from the heat exchanger using a vacuum cleaner with a dusting brush attached.
CAUTION! Do not apply any pressure. Applying pressure could damage the cooling fins and impair the drying performance.
5. Install the base filter.
6. Lock the 3 locking levers and close the cover until you hear a click.

TROUBLESHOOTING

Troubleshooting



WARNING!

- Only authorised technicians may carry out repairs.
- If you experience problems with the product, please see if the user instructions and troubleshooting information in the user manual can help you find a solution. If the problem persists:
 - turn off the product,
 - unplug the product from its power supply, and
 - contact the support.

Problem	Cause	Remedy
The machine does not start	The door is not properly closed	Close the door
	Machine is not connected to the power supply	Connect the power cord to the power outlet
	No programme has been selected	Select a programme
	You forgot to press 	Press 
	Machine is not turned on	Turn on the machine
Display does not come on	Power supply is not working	Check if the power supply works. If it is not in working condition contact your local electrician
	Main plug is not inserted	Connect main plug to power outlet
	No programme is selected	Select a programme
	Machine is not turned on	Press 
 is lit	Water container is full	Pour out the condensate water and restart the dryer. See section "Empty the water container", page 24 . If the container is not full, restart the dryer. If the " " icon is still lit after the dryer was restarted, contact the support.
 is lit	Door filter is full or needs cleaning	Clean the door filter

Problem	Cause	Remedy
Laundry is not dry enough or drying took too long	Door filter and heat exchanger needs cleaning	Clean the door filter, see section "Clean the door filter", page 23 . and heat exchanger, see section "Clean the heat exchanger", page 25
	The installation area does not fulfill the requirements	Adjust the installation area or move the dryer
	Air inlet is not clean	Keep the air inlet clean
	The selected drying programme and settings was not appropriate	If possible, adjust the dryness level and/or the drying time. Consider selecting another drying programme.
	Drain hose needs cleaning	Clean the drain hose
	Water container is full	Pour out the condensate water
The dryer turns off at the end of the programme	The dryer turns off automatically for energy saving	This is not an error but a normal function
Abnormal noises	The compressor is operating	These noises are normal and do not indicate any errors
	The machine is not levelled	Level the machine. See section "Level the tumble dryer", page 31

Error messages

Message	Cause	Remedy
E32	Humidity sensor error	Please contact your local service center if the problem occurs.
E33	Temperature sensor error	
E64	BLDC motor communication error	
E82	PCB communication error	
	Water pump failure or water level sensor failure	
	Container is full	Empty container
EXX	Other problem	Try again. Contact the support if the problem persists.



NOTE!

If your machine needs repair, consider repairing it. Repairing instead of buying new is good for the environment.

The spare parts listed in the EU regulation 2019/2023 will be available to professional repairers at least 10 years after this product was placed on the market.

INSTALLATION


Follow the instructions in this section to install your dryer.



WARNING!

- If this dryer is to be stacked on top of a washing machine, a stacking kit must be used (ordered separately). To avoid hazards, only the manufacturer, its service agent, or a similarly qualified technician may stack the machines.
- Make sure that air is able to circulate freely around the dryer. Do not obstruct the front air inlet or the air intake grilles at the back of the dryer.
- If the power cord is damaged, it must be replaced by the manufacturer, the manufacturer's service agent or similarly qualified persons in order to avoid a hazard.
- To ensure your safety, connect the plug to an earthed socket. Check carefully to ensure that your socket is properly and reliably earthed. If in doubt, contact a qualified electrician.
- Do not connect the dryer to the mains power by an extension cord, a multi-socket adapter, or similar.
- Before plugging in the dryer, make sure the connection parameters of the dryer match the mains electricity supply. See the specifications in this manual. The information can also be found on a label on the dryer. If in any doubt, consult a qualified electrician.
- Make sure that the power plug always is accessible so that the dryer can be disconnected from the mains.

Unpack the tumble dryer

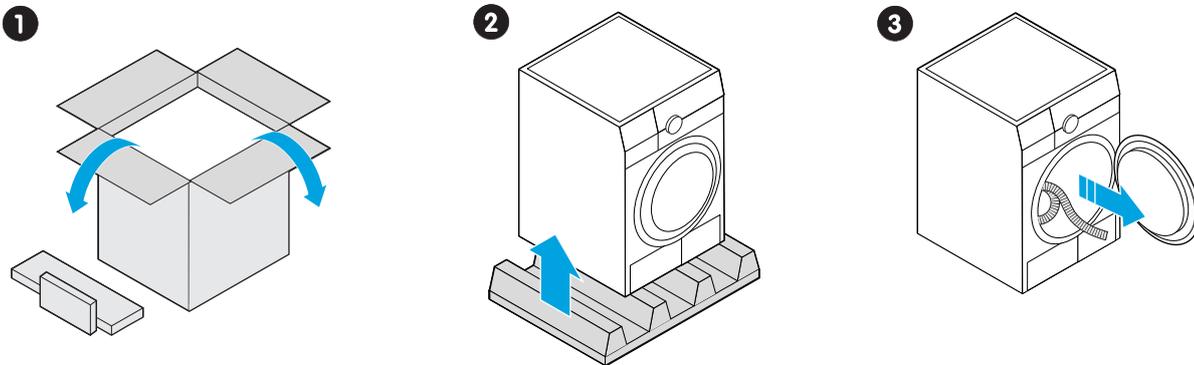

1. Remove the cardboard box and styrofoam packaging.
2. Lift the product and remove the base packaging.
3. Remove the accessories from the drum.





WARNING!

Keep all packaging material well away from children. There is a risk of suffocation!

Installation area

Keep the following in mind when choosing a location to install the dryer:

- The surface should be rigid, dry and level. Stability is important to prevent the machine from wandering and will keep the levels of vibration and noise at a minimum.

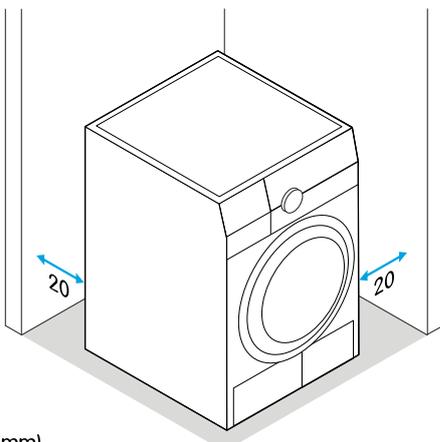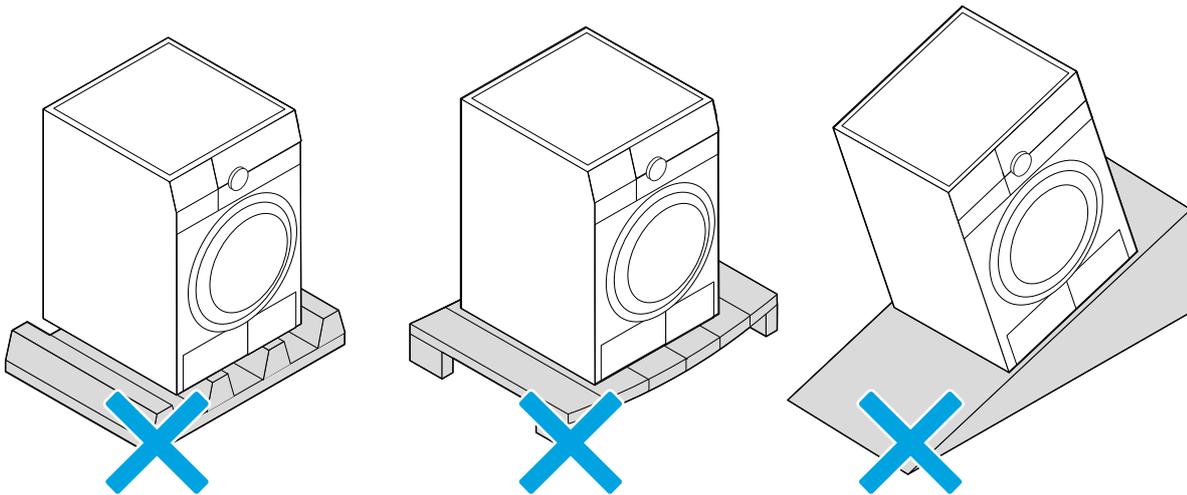

(mm)

- The location must be clean and dirt must not be allowed to accumulate.
- Avoid direct sunlight.
- Sufficient ventilation.
- Room temperature above 0 °C.
- Keep away from heat sources such as coal or gas appliances.
- For your convenience it is recommended that the product is positioned close to your washing machine.

**WARNING!**

- Make sure the dryer does not stand on the power cord.
- The plug must be accessible after installation.

**WARNING!**


The machine must not be used in very wet rooms or rooms where there is a risk of explosive or caustic gases.

**CAUTION!**


- The dryer is for indoor use only.
- The dryer is not intended for integration into a cabinet.

Level the tumble dryer

1

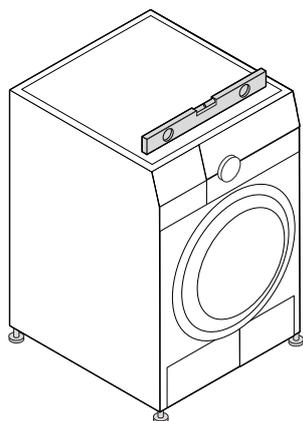

2

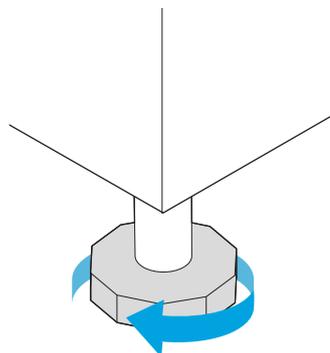

1. Use a spirit level to check if the dryer is perfectly level.
2. If needed, adjust the front feet by hand or by using a tool. The back feet are not adjustable.


**CAUTION!**

Do not remove the feet of the dryer.


Position the drain hose into a sink

Use the drain hose holder to keep the drain hose bent downward into the sink without kinking.


(cm)

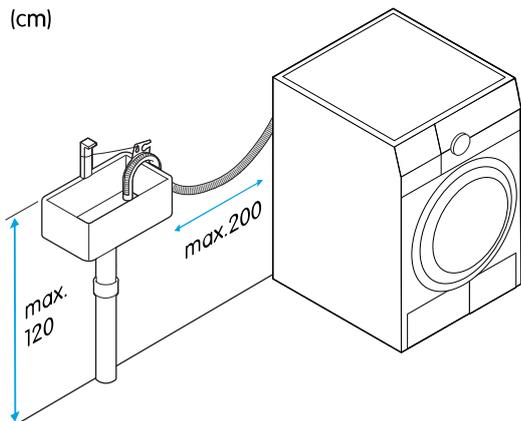


1

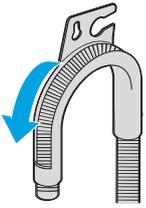

2

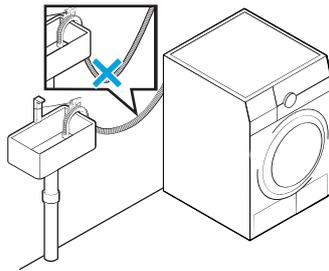

3

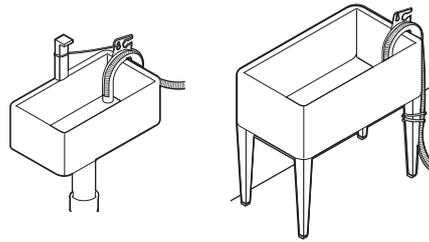

1. Insert the drain hose into the hose holder.
2. Hang the hose holder over the edge of the sink.
3. Secure the drain hose to the sink with a cord, clip or cable tie.

APPENDIX

Technical specifications

Model code	See section "Find the model code", page 13
Width	595 mm
Depth	640 mm
Height	845 mm
Weight	53 kg
Rated capacity (the maximum capacity to be dried at one time)	10.0 kg
Ambient temperature	+5 °C to +35 °C
Power supply	220-240 V AC, ~ 50 Hz
Rated input power	750 W
Refrigerant	R290
Quantity of refrigerant	120 g
CO ₂ -equivalent	0.00 T
GWP value	3

This product contains fluorinated greenhouse gases covered by the Kyoto protocol, contained in an hermetically sealed system.

Energy efficiency



NOTE!

The information in this section is based on the Cotton Standard dry  programme, unless stated otherwise, as is the information in the energy label of this product.

The Cotton Standard dry programme is suitable for drying normal wet cotton laundry and is the most efficient programme in terms of energy consumption for cotton.

Model code	See section "Find the model code", page 13
Dryer type	Condenser
Energy efficiency class	A+++
Weighted annual energy consumption (A _{EC}) Energy consumption per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used	211.3 kWh/year
Automatic or non-automatic	Automatic
EU Ecolabel award	N/A
Weighted energy consumption at full and partial load	1.31 kWh

Energy consumption at full load	1.77 kWh
Energy consumption at partial load	0.97 kWh
Power consumption in the off-mode (P ₀)	0.2 W
Power consumption in the left-on mode (P _l)	0.8 W
Duration of the left-on mode	10 min
Weighted programme time at full and partial load	145 min
Programme time at full load	190 min
Programme time at partial load	112 min
Condensation efficiency class on a scale from G (least efficient) to A (most efficient)	B
Weighted condensation efficiency at full and partial load	81 %
Average condensation efficiency at full load	81 %
Average condensation efficiency at partial load	81 %
Acoustic noise level at full load	66 dB

Energy consumption

All values were established in accordance with EN 61121. The actual consumption may differ from the values given in the table, depending on the amount of the laundry, type of fabric, residual moisture and any additional functions selected.

Programme	Load	Spin speed used for predrying the laundry	Residual humidity before drying	Drying time	Energy consumption
Cotton Standard dry	10 kg (full)	1000 rpm	60 %	190 min	1.77 kWh
Cotton Standard dry	5 kg (half)	1000 rpm	60 %	112 min	0.97 kWh
Synthetics Standard dry	4 kg	800 rpm	40 %	60 min	0.61 kWh

EU directives and standards

This product fulfils the applicable EU directives and regulations and carries the CE mark. If not included with the product, a copy of the EU Declaration of Conformity is available on request.

The performance of the product has been tested in compliance with standard EN 61121 for tumble dryers, EU regulation 392/2012 and EU regulation 932/2012.

ELVITA



ELON GROUP

Elvita products are distributed and marketed by Elon Group AB.
Elon Group AB Bäcklundavägen 1 | 702 03 Örebro Sweden
ELON GROUP | +46(0)10-220 40 00 | ELONGROUP.SE
Support and service: ELVITA.SE