



J8 twin (EA/SA/INTA)

Instructions for Use



Additional online content

Tap, click or scan the QR code to access additional online resources.

There are video tutorials to help you operate your J8 twin.




jura.com/support-j8twin


Contents

1 Control elements	3
2 For your safety	4
Comply with the instructions for use	4
Proper use	4
User limitations	4
Use by children	4
What to do in the event of damage	4
Preventing damage	5
Danger of electric shock	5
Danger of burns, scalding and injury	5
3 Preparing and using for the first time	6
Setting up the machine	6
Filling the bean container	6
Determining the water hardness	6
First-time use	6
Managing your J8 twin – the JURA Cockpit	8
Connecting milk	8
Establishing a WiFi connection	9
4 Preparation	9
Preparation with preselection (Aroma Selection and Speciality Selection)	9
Espresso and coffee	10
Sweet latte (prepared with syrup attachment)	10
Latte macchiato, cappuccino and other speciality coffees with milk	11
Americano and lungo	12
Milk and milk foam	12
Espresso doppio	12
Ground coffee	12
Hot water	13
Adjusting the grinder	13
Adjusting the product settings	13
5 Daily operation	14
Switching the machine on and off	14
Filling the water tank	14
Maintenance actions	14
6 Machine settings	15
7 Maintenance	16
Rinsing the machine	16
Automatic milk system rinsing	16
Cleaning the milk system	16
Dismantling and rinsing the professional fine foam frother	17
Inserting/changing the filter	18
Cleaning the machine	19
Descaling the machine	20
Descaling the water tank	22
Cleaning the bean container	22
8 Display messages	22
9 Troubleshooting	23
10 Transport and environmentally friendly disposal	23
Transport / Emptying the system	23
Disposal	24
11 Technical data	24
12 Index	25
13 JURA contact details / Legal information	26

1 Control elements

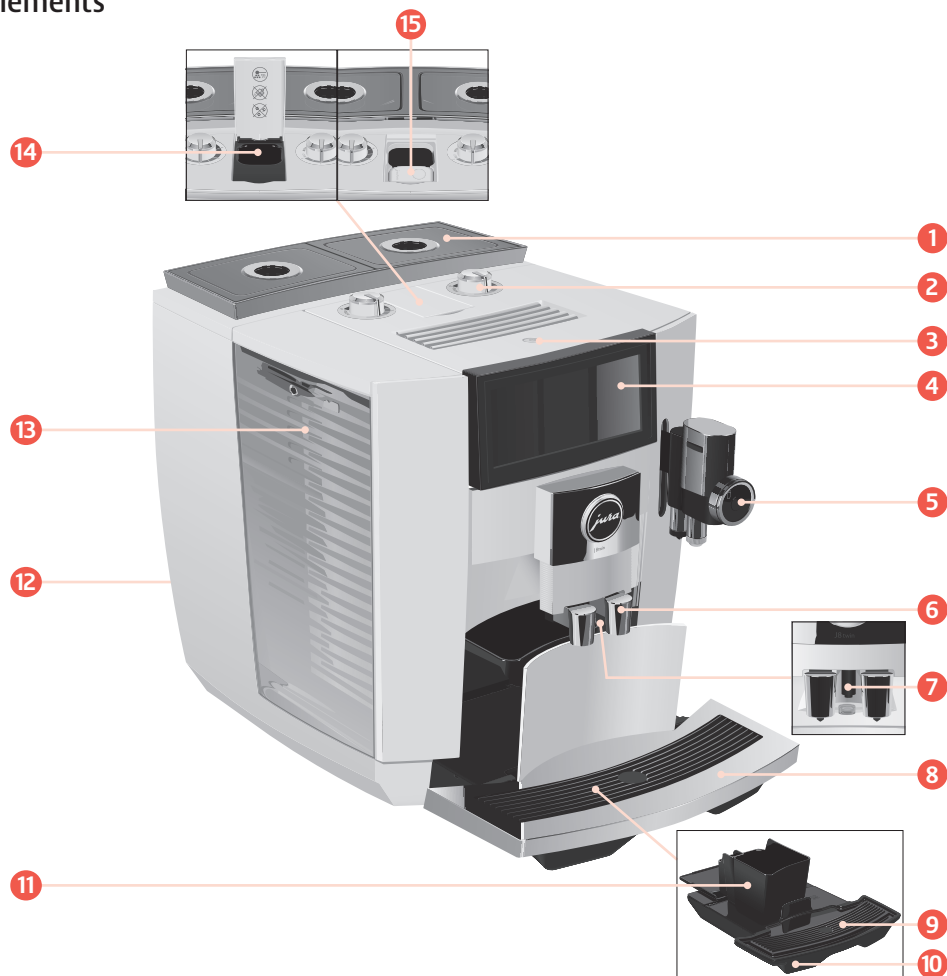

- 1 Bean container with aroma preservation cover
- 2 Grinder adjustment switch
- 3 On/Off button
- 4 Touch display
- 5 Milk system with professional fine foam frother (height-adjustable)
- 6 Coffee spout (height-adjustable)
- 7 Hot-water spout
- 8 Cup grille with aperture
- 9 Insert for drip tray
- 10 Drip tray
- 11 Coffee grounds container
- 12 Mains cable (permanently connected or plug-in)
- 13 Water tank with cover
- 14 Powder chute for ground coffee with cover (removable)
- 15 Service socket with JURA Wi-Fi Connect (under cover)
- 16 Filter casing
- 17 Container for milk system cleaning
- 18 Syrup attachment
- 19 Filler funnel for ground coffee
- 20 Measuring spoon for ground coffee

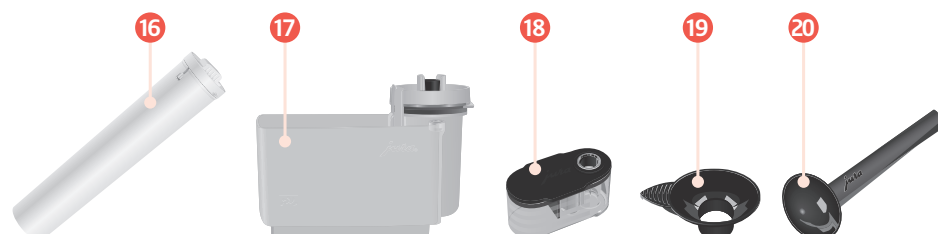



2 For your safety

Comply with the instructions for use

Before using the machine, read these instructions for use thoroughly and completely and comply with the instructions they contain. Keep these instructions for use close to the machine and pass them on to the next user.

Failure to observe the instructions for use may result in serious injuries or damage to property. Safety information is therefore indicated as follows:

 WARNING	Indicates circumstances that may result in serious injuries or death.
 CAUTION	Indicates circumstances that may result in minor injuries.
CAUTION	Indicates circumstances that may result in damage to property.

Proper use

The machine is intended for private domestic use. It should only be used for coffee preparation and to heat milk and water. Use for any other purpose will be deemed improper.

User limitations

People, including children, who

- do not have the physical, sensory or mental capabilities to use the machine safely or
- are inexperienced or lack knowledge

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

When using the CLARIS Smart+ filter cartridge or a JURA Wi-Fi Connect, wireless connections are established. Specific details on the frequency band used and the maximum transmission power can be found in the '11 Technical data' section.


Use by children

Children must be able to recognise and understand the potential dangers arising from incorrect use:

- Keep **children under the age of 8** away from the machine, or supervise them constantly.
- **Children aged 8 and over** may only operate the machine without supervision if they have been instructed in how to use it safely.
- Children may not clean or service the machine unless supervised by a responsible person.
- Do not allow children to play with the machine.


What to do in the event of damage

Never use a damaged machine or mains cable. This could result in fatal electric shock.

- In the event of signs of damage, disconnect the machine from the mains. To do this, first switch the J8 twin off with the On/Off button . Only then should you remove the mains plug from the power socket.
- Replace a damaged **plug-in mains cable** with an original JURA mains cable. Unsuitable mains cables may result in consequential damage.
- Only permit authorised JURA service centres to carry out **repairs to the machine** and the **permanently connected mains cable**. Unsuitable repairs may result in consequential damage.


Preventing damage

To avoid damage to the machine and the mains cable:

- The J8 twin must not be placed in a cabinet when in use.
- Do not use the J8 twin and the mains cable near hot surfaces.
- Do not allow the mains cable to rub against sharp edges and ensure that it does not become trapped.
- Never allow the mains cable to loosely hang down. The mains cable could pose a tripping hazard or become damaged.
- Protect the J8 twin from weather and direct sunlight.
- Only connect the J8 twin to a mains voltage corresponding to that stated on the rating plate. The rating plate is located on the underside.
- Connect the J8 twin directly to a domestic power socket. Using multi-socket adapters or extension cords may cause overheating.
- The surface of the heating element and outer enclosure remains hot after use and the outside of the appliance may retain heat.
- Do not use alkaline or alcohol-based cleaning agents; only use mild cleaning agents and a soft cloth.
- Do not use any coffee beans treated with additives or caramelised coffee beans.
- Only fill the water tank with fresh, cold, non-carbonated water.
- Switch the machine off with the On/Off button  if you are going to be absent for a longer period of time and remove the mains plug from the power socket.
- Only use original JURA maintenance products. Use of products that are not explicitly recommended by JURA could damage your J8 twin.

Danger of electric shock

Water conducts electricity. Do not bring water and electricity into contact with one another:

- Never touch the mains plug with wet hands.
- Do not immerse the J8 twin and/or mains cable in water.
- Do not put the J8 twin or any individual parts in the dishwasher.
- Before cleaning, switch the J8 twin off with the On/Off button . Always wipe the J8 twin with a damp cloth rather than a wet one, and protect it from prolonged exposure to water splash. The J8 twin must not be cleaned with a jet of water.
- The J8 twin is not suitable for installation on a surface where a jet of water can be used.


Danger of burns, scalding and injury

- Do not touch the spouts during operation. Use the handles provided.
- Optionally, your J8 twin can be remotely operated using mobile devices. When preparing a product or initiating a maintenance programme, make sure that other people are not put at risk – for example, through contact with the spouts.
- Be careful to ensure that the fine foam frother is correctly installed and clean, otherwise the fine foam frother (or parts of it) may come loose.

3 Preparing and using for the first time

Setting up the machine

- ▶ Choose a spot for your J8 twin which protects the machine against overheating. Ensure that the ventilation slots are not covered.

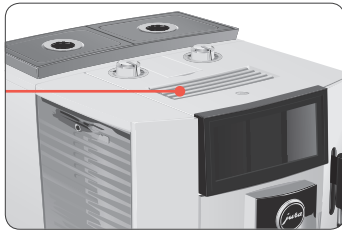

- ▶ Place the J8 twin on a horizontal surface that is not sensitive to water.

Filling the bean container

The aroma preservation covers on the bean containers ensure that the aroma of the beans is retained for longer.

CAUTION


Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinders.

- ▶ Only use roasted, untreated coffee beans to fill the bean container.
- ▶ Remove the aroma preservation cover.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

Determining the water hardness

When you use the machine for the first time, you must set the water hardness. If you know the hardness of your water, go straight to the next section. If you do not know the water hardness, you can find this out first:

- ▶ Hold the Aquadur® test strip supplied under running water for one second. Shake off the water.
- ▶ Wait for about 1 minute.
- ▶ You will then be able to read the degree of water hardness from the discolouration of the Aquadur® test strip and the description on the packaging.

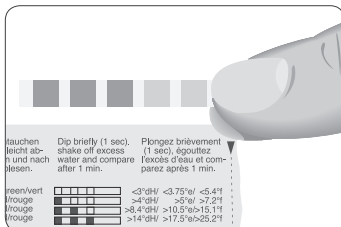

First-time use

⚠ WARNING

If the machine is operated with a defective mains cable, there is a danger of potentially fatal electric shock.


- ▶ Never use a machine which is damaged or has a defective mains cable.

CAUTION

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.

Precondition: The bean containers have been filled.

- ▶ For machines with a **plug-in** mains cable: Connect the mains cable to the machine.
- ▶ Insert the mains plug into a power socket.
- ▶ Press the On/Off button  to switch the J8 twin on.

'Sprachauswahl' / 'Deutsch'

- ▶ To display more languages, tap < or > until the desired language comes into focus (e.g. 'English').

- ▶ Touch 'Save'.
✓ appears briefly on the display.
'Unit' 'ml'

i To switch between **ml** and **oz**, tap < or >.


- ▶ Touch 'Save'.
✓ appears briefly on the display.
'Water hardness'

i Please refer to the section above for a description of how to determine the water hardness.


- ▶ Touch < or > to change the water hardness setting.
- ▶ Touch 'Save'.
✓ appears briefly on the display.
'Insert filter'
- ▶ Remove the water tank and rinse it with cold water.
- ▶ Open the filter casing.



- ▶ Insert the CLARIS Smart+ filter cartridge .

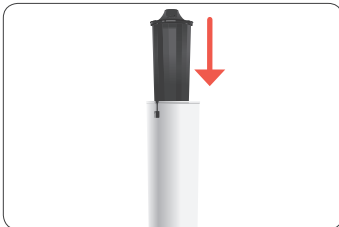

- ▶ Close the filter casing.
- ▶ Insert the filter casing into the water tank.
- ▶ Turn the filter casing clockwise until it audibly clicks into place.

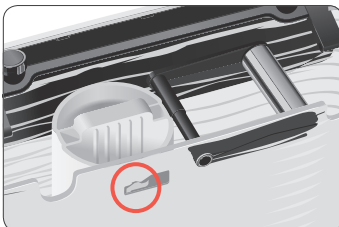


- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

i The machine automatically detects that you have just inserted the filter cartridge.

- 'Filter operation' ✓
- 'Filter is being rinsed', water flows directly into the drip tray.
- 'System is filling'
- 'Empty drip tray'

- ▶ Empty the drip tray and put it back into the machine.

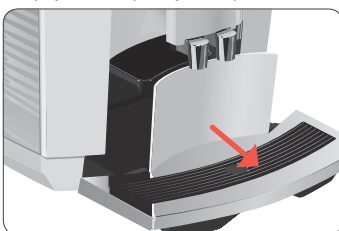

- 'Filter operation' ✓
- 'Connections' / 'Wi-Fi connection'


3 Preparing and using for the first time








- ▶ If necessary, scan the QR code with your mobile device to download the JURA app (J.O.E.™).



- i** If you would like to connect the J8 twin to your home network, tap **'Connect'** and follow the instructions on the display. You can also establish the connection later on (in the machine settings under **'Connections'**).
- ▶ Touch **'Next'**.
'Connections' / 'Connect accessory'
- i** You have the option of connecting the J8 twin to the JURA Cool Control milk cooler (wireless connection). To do this, tap **'Connect'** and follow the instructions on the display.
- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.
- ▶ Touch **'Next'**.
'Machine is rinsing' / 'Milk system is being rinsed'
The start screen is displayed. Your J8 twin is ready for use.

Managing your J8 twin – the JURA Cockpit


The **JURA Cockpit** allows you to manage your J8 twin. Tap  at the top to open the JURA Cockpit.

Symbol	Meaning
	'Machine settings' area (green)
	'Maintenance' area (blue)
	Filter mode
	The 'Coffee Eye' function (for cup detection) is enabled
	Run a self-diagnosis to check the maintenance status of your J8 twin
 (white)	Your J8 twin is connected to the network and/or Cool Control via JURA Wi-Fi Connect
 (red)	No connection to the Wi-Fi network

Connecting milk

Your J8 twin creates fine, creamy, feather-light milk foam with a perfect consistency. The most important requirement for frothing milk is a milk temperature of 4–8 °C. We would therefore recommend using a milk cooler or a milk container.

- ▶ Remove the protective cover from the fine foam frother.
- ▶ Connect the milk pipe to the fine foam frother.

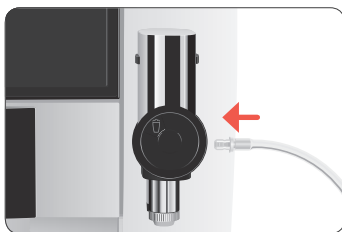



- i** The milk system of your J8 twin has a connector **HP3** and an interchangeable milk spout **CX3**.
- ▶ Connect the other end of the milk pipe to a milk container or a milk cooler.

Establishing a WiFi connection

Your J8 twin can be connected with your JURA app (J.O.E.[®]).

Precondition: J.O.E.[®] is installed on your mobile device. The JURA Wi-Fi Connect is inserted into the service socket of your J8 twin.

- Tap  at the top to open the JURA Cockpit.
- Touch the 'Machine setting'  symbol.
- Tap 'Connections'.
- Tap 'Connect'.
- Add a new network in your JURA app (J.O.E.[®]) and follow the instructions.

4 Preparation

Products shown on the start screen:

Start screen page 1		
Espresso	Coffee	Latte macchiato
Americano		Cortado
Lungo		Cappuccino
Hot water		Café au lait
Start screen page 2		
Macchiato	Sweet Latte	Portion of sweet milk foam
Flat white		Flat white Extra Shot
Portion of milk foam		2x coffee
Espresso doppio		Latte macchiato Extra Shot


Basic information about preparing drinks:




Aim	What to do
Change bean container and the coffee strength of a single product	See next section, 'Preparation with preselection (Aroma Selection)'
Change the amount for a single product	During preparation, tap < or >
Display more products	On the start screen, touch < or >
Stop preparation	Touch 'Cancel'
Permanently change the consistency of grind, coffee strength, quantities and other settings for any given product	Tap and hold a product for around 2 seconds and configure the settings
Repositioning or replacing a product	Tap and hold a product for around 2 seconds and then tap 'Replace'

i If the screensaver is active, touch the display to return to the start screen.

i Coffee tastes best served hot. A cold porcelain cup cools the beverage – and impairs the taste. We therefore recommend prewarming the cups. You can purchase a JURA cup warmer from your specialised dealer.

Preparation with preselection (Aroma Selection and Speciality Selection)

With the Aroma Selection function  on your J8 twin, you can change the **coffee strength** of any given product before preparing it. You can also choose which **bean container** is used to prepare a coffee and select additional settings:

Speciality Selection	Meaning
 – Double product (espresso, coffee)	The product is prepared with two brewing operations (two strokes).
'S' – 'Sweet milk foam' (all speciality coffees with milk)	Use the syrup attachment provided to prepare the product with sweet milk foam.
 – 'Extra Shot' (all speciality coffees with milk except macchiato and cortado)	The product is prepared with two brewing operations, with half the amount of water – for a speciality coffee with a particularly intense taste.
 – Ground coffee (all speciality coffees except for espresso doppio)	The product is prepared with ground coffee.


i Not all settings are available for all products.

4 Preparation

Example: Cappuccino with higher coffee strength

- ▶ Place a cup under the fine foam frother.



- ▶ Tap the 'Aroma Selection' symbol  (bottom centre).
- ▶ Tap 'Cappuccino' (within 10 seconds).
- ▶ Tap the setting control for the appropriate grinder (circle) to increase the coffee strength.

i You can also select which grinder should be used (100% / 50% / 0%).

- ▶ Touch 'Next'.
'Easy Mode' appears. In this mode, you can configure additional settings.
- ▶ Tap the **picture** of the cappuccino (or 'Start').
Preparation starts. The cappuccino is prepared according to your chosen settings.

Espresso and coffee

Example: Coffee

- ▶ Place a cup under the coffee spout.



- ▶ Tap 'Coffee'.
The preset amount of water for coffee flows into the cup.

Sweet latte (prepared with syrup attachment)

The Sweet Latte is a speciality coffee with sweet milk foam. To make this speciality, use the syrup attachment provided.

i All specialities with milk can also be prepared with **sweet milk foam**. To do this, use the syrup attachment provided and before starting preparation, select the Speciality Selection 'S'.

Precondition: Milk is connected to the fine foam frother.

- ▶ Remove the cover from the syrup attachment.



- ▶ Fill the syrup attachment with syrup. Fill it to the first, second or third mark depending on the desired sweetness.
- ▶ Close the syrup attachment.
- ▶ Tap 'Sweet Latte'.
'Please remove the fine foam frother and connect the syrup attachment.'

- Remove the lower part of the fine foam frother.



- Connect the syrup attachment to the fine foam frother.



- Turn the setting wheel of the fine foam frother to the 'Milk Foam' position.
- Place a cup under the fine foam frother.
- Touch 'Next'.
The preset amounts of coffee and milk foam flow into the cup.
'Please remove the syrup attachment for cleaning and connect the fine foam frother.'
- Remove the syrup attachment and rinse it thoroughly under running water.

i The syrup attachment, including the cover, is dishwasher-safe.

- Re-attach the lower part of the fine foam frother.
- Touch 'Next'.

i **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the fine foam frother after preparing milk.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see chapter 7 'Maintenance – Cleaning the milk system').

Latte macchiato, cappuccino and other speciality coffees with milk

Your J8 twin prepares the following speciality coffees with milk at the touch of a button:

- Cortado
- Cappuccino
- Café au lait
- Macchiato
- Flat white
- Latte macchiato

Example: Latte macchiato

Precondition: Milk is connected to the fine foam frother.

- Place a glass under the fine foam frother.



- Tap 'Latte macchiato'.
The preset amounts of milk and milk foam flow into the glass.

i There is a short interval while the hot milk separates from the milk foam. This allows the typical layers of a latte macchiato to form.
The preset amount of water for espresso flows into the glass.

4 Preparation

i **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the fine foam frother after preparing milk.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see chapter 7 'Maintenance – Cleaning the milk system').

Americano and lungo

For the americano and lungo, the J8 twin blends the coffee with hot water using a special preparation method. This results in a full-bodied speciality coffee which is particularly easy to digest. You can change the amount of this additional water (see chapter 4 'Preparation – Adjusting the product settings').

Milk and milk foam

Your J8 twin prepares hot milk and milk foam. To do this, turn the setting wheel of the fine foam frother to the 'Milk Foam' or 'Milk' position.

i **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the fine foam frother after preparing milk.

Espresso doppio



'Doppio' is Italian for 'double'. When you select Espresso doppio, two espressos are prepared one after the other. The result is an extra full-bodied and aromatic speciality coffee.

Ground coffee

You can choose to use a second coffee variety, for example decaffeinated coffee, with the filter funnel for ground coffee.

- Never add more than two level measuring spoons of ground coffee.
- Use ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.
- If you did not fill the machine with a sufficient amount of ground coffee, '**Not enough ground coffee**' is displayed and the J8 twin stops the operation.
- The desired speciality coffee must be prepared within approximately one minute after filling with the ground coffee. Otherwise the J8 twin stops the operation and is once more ready for use.

Example: Proceed as follows to prepare an espresso using ground coffee.

- Place an espresso cup under the coffee spout.
- Tap the 'Aroma Selection' symbol  (bottom centre).
- Tap '**Espresso**'.
- Touch .
- Touch '**Next**'.
- Touch '**Start**'..
- '**Please add ground coffee**'
- Open the powder chute cover.



- Place the filler funnel for ground coffee on the powder chute.



- Add the desired amount of ground coffee to the filler funnel (max. 2 level measuring spoons).

i The amount of ground coffee determines the intensity and aroma of the beverage, so you can adjust it to your personal preferences.

- ▶ Remove the filler funnel.
- ▶ Close the cover.
- ▶ Touch 'Next'.
The preset amount of water for espresso flows into the cup.

i The powder chute and cover can be removed and also cleaned, if necessary.

Hot water

The J8 twin allows you to prepare different variants of hot water:

- 'Hot water'
- 'Hot water for green tea' (Product must be added to the start screen. To do this, tap and hold any product for 2 seconds, then use the 'Replace product' function to select hot water for green tea.)

⚠ CAUTION

There is a danger of scalding from hot water splashes.

- ▶ Avoid direct contact with the skin.

Example: Hot water

- ▶ Place a cup under the hot-water spout.




- ▶ Tap 'Hot water'.
The preset amount of water flows into the cup.

Adjusting the grinder


The grinder adjustment switches are used to adjust both grinders according to your preference for a mild or intense aroma.



Adjusting the product settings

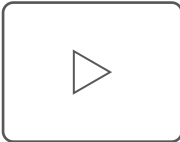

Tap, click or scan to watch
the video tutorial on YouTube



Touch a product for **approximately 2 seconds** to access the settings:



- Save permanent settings for preferred coffee strength and quantity, change the product name or preselect options such as 'Sweet milk foam', 'Extra Shot' or 'Ground coffee'.
- The 'Replace' symbol allows you to choose between 'Replace product' and 'Reposition the product'.

i Depending on the selected product, there will be different settings available which are represented by symbols on your display.


The settings always follow the same model.

5 Daily operation


Example: Proceed as follows to change the **quantity** for one coffee.

- ▶ Touch 'Coffee' for **approximately 2 seconds**.
- ▶ Tap the symbol for fill volume .
- ▶ Tap < or > to change the setting.
- ▶ Tap  and confirm the setting by selecting 'Yes'.

5 Daily operation

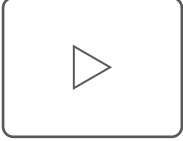

Tap, click or scan to watch
the video tutorial on YouTube



Switching the machine on and off

- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.



- ▶ Press the On/Off button .

'Machine is rinsing'

Your J8 twin is switched on or off.

- i** When the machine is switched off, the system is only rinsed if a speciality coffee has been prepared.
- i** If milk has been prepared before switching off, you will be prompted to carry out milk system cleaning ('Clean the milk system'). After 30 seconds the switch-off process continues automatically.

Filling the water tank

Daily maintenance of the machine and hygiene when handling milk, coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.

CAUTION


Milk, sparkling mineral water or other liquids can damage the water tank or the machine.



- ▶ Only fill the water tank with fresh, cold water.
- ▶ Remove the water tank and rinse it with cold water.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

Maintenance actions


Optimal coffee quality depends on many factors. One important prerequisite is regular maintenance of your J8 twin. Carry out the following steps:

Maintenance action	Daily	If necessary	Note
Empty the drip tray and coffee grounds container and rinse with warm water (The insert for the drip tray, including the drip tray itself, and the coffee grounds container are dishwasher-safe)	▪		Always empty the coffee grounds container when the machine is switched on. This is the only way of resetting the coffee grounds counter.





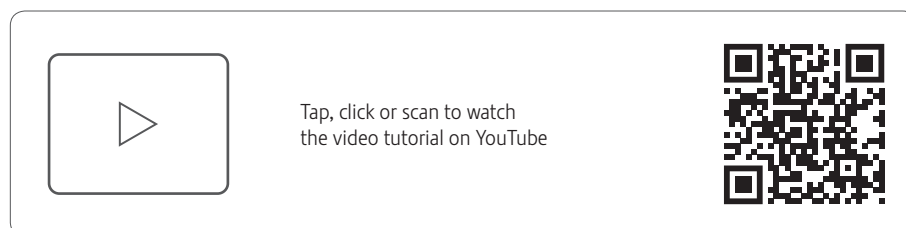

Maintenance action	Daily	If necessary	Note
Clean the milk system (if heavily soiled, also dismantle and rinse it)	▪		See chapter 7 'Maintenance – Cleaning the milk system'. We recommend that you dismantle and rinse the professional fine foam frother once a week (see chapter 7 'Maintenance – Dismantling and rinsing the professional fine foam frother')
Rinse the milk pipe	▪		
Rinse the water tank	▪		
Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfibre cloth)	▪		
Remove and clean the powder chute for ground coffee		▪	
Changing milk pipe with connector HP3		approx. every 3 months	
Change the interchangeable milk spout CX3		approx. every 3 months	
Clean the inside of the water tank with a brush		▪	
Clean the top and bottom of the cup grille		▪	
Thoroughly clean the drip tray and coffee grounds container		▪	In the 'Maintenance' area  of the Cockpit, the message 'Maintenance information' appears.

- i** Perform a **self-diagnosis** on a regular basis to check the maintenance status of your J8 twin. To do this, touch  in the Cockpit.
- i** You will find more information about the maintenance of your J8 twin in the 'Maintenance' area  in the programme item 'Maintenance information'.

6 Machine settings






Tap  on the start screen to open the Cockpit. In the 'Machine settings' section  the following settings can be configured:

Programme item	Sub-item	Explanation
Page   		
'Choose language'		Set language
'Water hardness'		Set the hardness of the water used (1 °dH to 30 °dH) to prevent limescale building up in your machine
'Connections' (only displayed if JURA Wi-Fi Connect is being used)	'Wi-Fi connection'	Wirelessly connect the J8 twin to the JURA app (J.O.E.™) or disconnect again
	'Connect accessory'	Establish a wireless connection between your J8 twin and the Cool Control milk cooler or disconnect it again
Page   		
'Display'	'Set profile'	Create (0–4) profiles in the Cockpit and personalise 3 favourite speciality coffees for each
	'Product name'	Display product images with/without product names on the start screen
	'Grinder name'	Change the names of the grinders, e.g. to specify the beans that are used in each
	'Brightness'	Change display brightness (in 10% increments)
'Counter'	'Product counter'	View product counter
	'Maintenance counter'	View the maintenance counter

Programme item	Sub-item	Explanation
'General'	'Information'	View software version
	'Empty system'	Empty the system to protect the J8 twin from frost damage during transport
	'Factory setting'	Reset your J8 twin to factory settings (the machine then switches off)
Page ○○●		
'Timer'	'Switch off after'	Set the automatic switch-off time to save energy (switch-off after 15 minutes, 30 minutes or 1 – 9 hours after the last action on the machine)
'Operating instructions'	'Coffee Eye'	Activate/deactivate operating instructions for 'Coffee Eye' automatic cup recognition
	'Aroma control'	Show recommended settings for consistency of grind (enabled/disabled)
	'Sweet Foam function'	Show instructions for using the syrup attachment and fine foam frother
	'Milk / Milk foam'	Show instructions for using the fine foam frother and switching between milk and milk foam
'Unit'		Set the unit for the amount of water (ml or oz)

7 Maintenance

Basic information about maintenance:

- You can manage the maintenance of your J8 twin in the 'Maintenance'  area of the Cockpit.
- If a maintenance programme needs to be initiated, the  area on the start screen appears with a red background. Tap  to open the JURA Cockpit. Here, maintenance programmes that need to be carried out are shown in the form of messages with red backgrounds. Touch a message to go straight to the corresponding maintenance programme.
- Carry out each maintenance programme when you are prompted to do so.



Rinsing the machine

You can start coffee system rinsing manually at any time.

Precondition: The start screen is displayed.

- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.




- ▶ Tap  at the top to open the JURA Cockpit.
- ▶ Touch the 'Maintenance' symbol .
- ▶ Touch 'Rinse' to start the rinse operation.
'Milk system is being rinsed'
'Machine is rinsing'
The rinse stops automatically.


Automatic milk system rinsing

8 minutes after milk preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the professional fine foam frother after preparing milk.

Cleaning the milk system

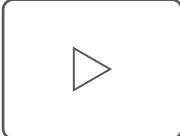

Tap, click or scan to watch
the video tutorial on YouTube



To ensure that the milk system always works properly, you must clean it **daily** when you have been preparing milk.

CAUTION


If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

i JURA milk system cleaner is available from specialised dealers.

i Use the container supplied for milk system cleaning.

Precondition: 'Clean the milk system' is displayed in the Cockpit.

- ▶ Tap  at the top to open the JURA Cockpit.

- ▶ Tap 'Clean the milk system'.

- ▶ Touch 'Next'.

'Cleaning agent for milk system' / 'Connect the milk tube' / 'Milk Foam position' / 'Attach the spout to the container'

- ▶ Remove the milk pipe from the milk container or milk cooler.

- ▶ Pour one dosing unit of milk system cleaner into the container for milk system cleaning.



- ▶ Place the container under the coffee spout and the fine foam frother.

- ▶ Push the fine foam frother down as far as it will go to connect it firmly to the container.



- ▶ Connect the milk pipe to the container.



i To connect the milk pipe to the container correctly, the pipe must be fitted with a connector HP3.

- ▶ Turn the setting wheel of the fine foam frother to the 'Milk Foam' position.

- ▶ Touch 'Start'.

The fine foam frother and the milk pipe are cleaned.

The operation stops automatically.

Dismantling and rinsing the professional fine foam frother


If insufficient foam is produced when the milk is frothed or milk sprays out of the professional fine foam frother, the frother may be dirty.

If this happens, dismantle and rinse the professional fine foam frother.


i We recommend that you dismantle and rinse the professional fine foam frother once a week

7 Maintenance


- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Remove the professional fine foam frother.

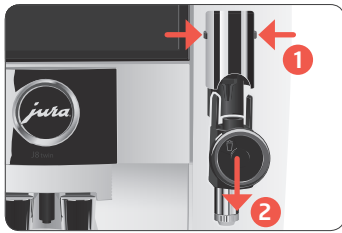

- ▶ Dismantle the fine foam frother into its individual parts.

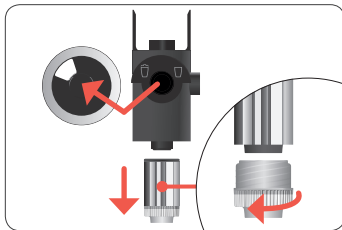


- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 250 ml water and one dosing unit of JURA milk system cleaner. Then rinse the individual parts thoroughly.
- ▶ Re-assemble the professional fine foam frother.

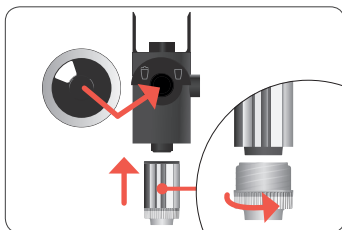


- i** Ensure that all individual parts are correctly and firmly connected to ensure optimum operation of the professional fine foam frother.
- ▶ Re-fit the professional fine foam frother on the milk system.



Inserting/changing the filter

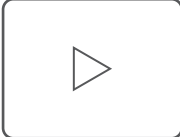

Tap, click or scan to watch
the video tutorial on YouTube




Once the filter cartridge stops working (depending on the water hardness setting), the J8 twin will prompt you to change the filter.

- i** Your J8 twin no longer has to be descaled if you are using the CLARIS Smart+ filter cartridge.
- i** CLARIS Smart+ filter cartridges are available from specialised dealers.


Precondition: The start screen is displayed. (Alternatively, 'Change the filter' is displayed in the Cockpit if the filter's capacity has been exhausted.)

- ▶ Remove and empty the water tank.
- ▶ Turn the filter casing anti-clockwise and remove it from the water tank.


- ▶ Open the filter casing.

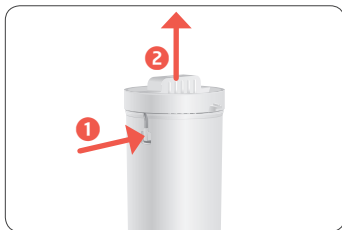

- ▶ Remove the old CLARIS Smart+ filter cartridge .
- ▶ Insert a **new** CLARIS Smart+ filter cartridge .

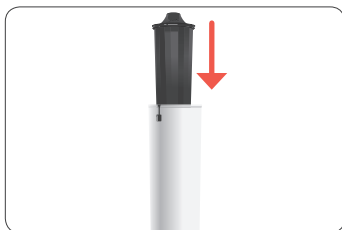


- ▶ Close the filter casing.
- ▶ Insert the filter casing into the water tank.
- ▶ Turn the filter casing clockwise until it audibly clicks into place.

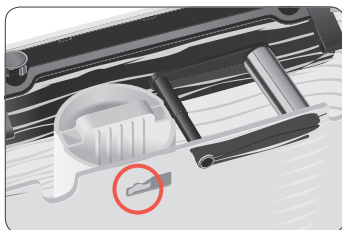


- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
The machine automatically detects that you have just inserted/changed the filter cartridge.
'Filter is being rinsed', water flows directly into the drip tray.
'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The start screen is displayed.

Cleaning the machine

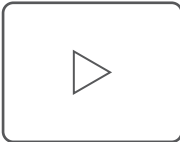

Tap, click or scan to watch
the video tutorial on YouTube



After 180 preparations or 80 switch-on rinses, the J8 twin will prompt you to clean it.


CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** JURA cleaning tablets are available from specialised dealers.

Precondition: 'Clean' is displayed in the Cockpit.

- ▶ Fill the water tank.
- ▶ Tap  at the top to open the JURA Cockpit.
- ▶ Tap 'Clean'.

7 Maintenance

- ▶ Touch 'Start'.
'Empty coffee grounds container' / 'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.




- ▶ Touch 'Next'.
'Machine is being cleaned'
The operation is interrupted, 'Add cleaning tablet'.
- ▶ Open the powder chute cover.
- ▶ Insert a JURA cleaning tablet into the powder chute.




- ▶ Close the cover.
- ▶ Touch 'Next'.
'Machine is being cleaned'
'Empty coffee grounds container' / 'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

Descaling the machine

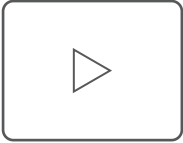

Tap, click or scan to watch
the video tutorial on YouTube



The J8 twin builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

i If you are using a CLARIS Smart+ filter cartridge, you will not be prompted to descale.

⚠ CAUTION

If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
- ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.

CAUTION

If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

CAUTION

If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling programme to run to the end.
-


CAUTION


If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.

- Clean up any splashes immediately.

- i** The descaling programme lasts approximately 20 minutes.
- i** JURA descaling tablets are available from specialised dealers.

Precondition: 'Descal' is displayed in the Cockpit.

- Tap  at the top to open the JURA Cockpit.
- Tap 'Descal'.
- Touch 'Start'.
- 'Empty drip tray'
- Empty the drip tray and coffee grounds container and put them back into the machine.
- 'Pour descaling agent into water tank'
- Remove and empty the water tank.
- Completely dissolve 3 JURA descaling tablets in a receptacle holding 500 ml of water. This may take several minutes.

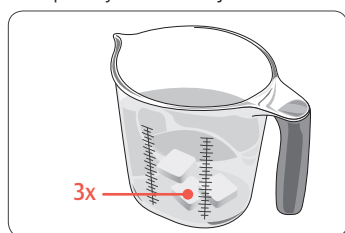

- Pour the solution into the **empty** water tank and insert it into the machine.
- Place one receptacle under the hot-water spout and another under the fine foam frother.



- Touch 'Next'.
- 'Machine is being descaled', water flows repeatedly out of the hot-water spout and fine foam frother straight into the drip tray.
- 'Empty drip tray'
- Empty the drip tray and coffee grounds container and put them back into the machine.
- 'Rinse the water tank' / 'Fill water tank'
- Empty the receptacles and place them back under the hot-water spout and the fine foam frother.



- Remove the water tank and rinse it thoroughly.
- Fill the water tank with fresh, cold water and reinsert the tank.
- Touch 'Next'.
- Water flows repeatedly out of the hot-water spout and fine foam frother straight into the drip tray.
- 'Empty drip tray'
- Empty the drip tray and coffee grounds container and put them back into the machine.

- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Descaling the water tank


Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- Remove the water tank.
- If you use a CLARIS Smart+ filter cartridge, remove this.
- Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- Leave the water tank with the descaling solution for several hours (e.g. overnight).
- Empty the water tank and rinse it thoroughly.
- If you use a CLARIS Smart+ filter cartridge, insert this again.
- Fill the water tank with fresh, cold water and reinsert the tank.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: 'Fill bean container' is displayed.


- Switch the machine off with the On/Off button .
- Remove the aroma preservation cover.
- Clean the bean container with a soft, dry cloth.
- Fill the bean container with coffee beans and close the aroma preservation cover.

8 Display messages


Messages on the start screen

Message	Cause/Result	Action
'Fill water tank'	The water tank is empty. You cannot prepare any products.	▸ Fill the water tank (see chapter 5 'Daily operation – Filling the water tank').
'Empty coffee grounds container' / 'Empty drip tray'	The coffee grounds container is full. / The drip tray is full. You cannot prepare any products.	▸ Empty the coffee grounds container and the drip tray (see chapter 5 'Daily operation – Maintenance actions').
'Drip tray not fitted'	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	▸ Fit the drip tray.
'Fill left bean container' / 'Fill right bean container'	One of the bean containers is empty. You cannot prepare any speciality coffees for which coffee beans are required from this bean container. You can prepare hot water or milk.	▸ Fill the bean container (see chapter 3 'Preparing and using for the first time – Filling the bean container').
'Not enough ground coffee'	There is insufficient ground coffee in the machine; the J8 twin stops the operation.	▸ The next time you prepare a beverage, add more ground coffee (see chapter 4 'Preparation – Ground coffee').

Messages in the Cockpit

Message	Cause/Result	Action
The filter symbol  lights up red. 'Change the filter'	The filter cartridge no longer works.	▸ Replace the CLARIS Smart+ filter cartridge (see chapter 7 'Maintenance – Inserting/changing the filter').
'Clean'	The J8 twin is prompting you to clean it.	▸ Perform cleaning (see chapter 7 'Maintenance – Cleaning the machine').
'Descale'	The J8 twin is prompting you to descale it.	▸ Perform descaling (see chapter 7 'Maintenance – Descaling the machine').
'Clean the milk system'	The J8 twin prompts you to clean the milk system.	▸ Perform milk system cleaning (see chapter 7 'Maintenance – Cleaning the milk system').

9 Troubleshooting

Problem	Cause/Result	Action
Insufficient foam is produced when the milk is frothed or milk sprays out of the fine foam frother.	The fine foam frother is dirty.	<ul style="list-style-type: none"> ▸ Clean the fine foam frother (see chapter 7 'Maintenance – Cleaning the milk system'). ▸ Dismantle and rinse the fine foam frother (see chapter 7 'Maintenance – Dismantling and rinsing the professional fine foam frother').
The 'Coffee Eye' reports a cup under the coffee spout even though no cup has been placed there.	The cup detection sensor behind the coffee spout is dirty.	<ul style="list-style-type: none"> ▸ Clean the sensor with a damp cloth.
Coffee only comes out in drips when it is being prepared.	The coffee is ground too finely and obstructs the system.	<ul style="list-style-type: none"> ▸ Put the grinder on a coarser setting or use coarser ground coffee.
	The water hardness may not have been correctly set.	<ul style="list-style-type: none"> ▸ Perform descaling (see chapter 7 'Maintenance – Descaling the machine').
There is dry ground coffee behind the coffee grounds container.	The beans used are resulting in an above-average volume of ground coffee.	<ul style="list-style-type: none"> ▸ Reduce the coffee strength or choose a finer grinder setting (see chapter 4 'Preparation – Adjusting the product settings').
'Fill water tank' is not displayed although the water tank is empty.	There is a lot of limescale in the water tank.	<ul style="list-style-type: none"> ▸ Descale the water tank (see chapter 7 'Maintenance – Descaling the water tank').
Grinder is making a very loud noise.	There are foreign objects in the grinder.	<ul style="list-style-type: none"> ▸ Contact customer support in your country (see chapter '13 JURA contact details / Legal information').
'ERROR 2' or 'ERROR 5' is displayed.	If the machine has been exposed to the cold for a long period of time, heating may be disabled for safety reasons.	<ul style="list-style-type: none"> ▸ Warm the machine at room temperature.
Other 'ERROR' messages are displayed.	–	<ul style="list-style-type: none"> ▸ Switch the J8 twin off with the On/Off button . Contact customer support in your country (see chapter '13 JURA contact details / Legal information').

i If you were unable to solve the problem, contact customer support in your country (see chapter '13 JURA contact details / Legal information').

10 Transport and environmentally friendly disposal

Transport / Emptying the system




Keep the packaging for your J8 twin. It should be used to protect the machine during transport.

In order to protect the J8 twin from frost during transport, the system must be emptied.

Precondition: The start screen is displayed.

- Remove the milk pipe from the fine foam frother.
- Place one receptacle under the hot-water spout and another under the fine foam frother.



- Tap  at the top to open the JURA Cockpit.
- Touch the 'Machine setting'  symbol.
- Tap > to call up .
- Tap 'General'.
- Tap 'Empty system'.

11 Technical data

- ▶ Touch 'Next'.
'Remove the water tank'
- ▶ Remove and empty the water tank.
- ▶ Touch 'Start'.
Steam will continue to be discharged from the fine foam frother and the hot-water spout until the system is empty.
Your J8 twin is switched off.

Disposal

Please dispose of old machines in an environmentally neutral way.



Old machines contain valuable, recyclable materials which should be recycled. Please therefore dispose of old machines via suitable collection systems.

11 Technical data

Voltage	220–240 V ~, 50 Hz
Power	1450 W
Conformity mark	CE
Pump pressure	static, max. 15 bar
Holding capacity of water tank (without filter)	1.9 l
Holding capacity of bean container	2 × 180 g
Holding capacity of coffee grounds container	max. 16 portions
Cable length	approx. 1.1 m
Weight	11.5 kg
Dimensions (W × H × D)	31 × 36.1 × 44.6 cm
Milk system with connector	HP3
Interchangeable milk spout	CX3
CLARIS filter cartridge Smart+ (RFID technology)	Frequency band 13.56 MHz Max. transmission power < 1 mW
JURA Wi-Fi Connect (Wi-Fi connection)	Frequency band 2.4 GHz Max. transmission power < 100 mW
JURA type	769

Information for testers (repeat test in accordance with DIN VDE 0701-0702): The central grounding point (CGP) is located on the back of the machine, right next to the mains cable's connection point.

12 Index

A

- Addresses 26
- Adjusting the product settings 13
- Americano 12
- Aroma preservation cover
 - Bean container with aroma preservation cover 3
- Aroma Selection 9

B

- Bean container
 - Bean container with aroma preservation cover 3
 - Cleaning 22
 - Filling 6
- Bus bar
 - Technical data 24
- Button
 - On/Off button 3

C

- Caffè latte 11
- Cappuccino 11
- Central grounding point 24
- Children 4
- CLARIS Smart filter cartridge
 - Changing 18
 - Inserting 18
- Cleaning
 - Bean container 22
 - Machine 19
- Cockpit 8, 15, 16
- Coffee 10
- Coffee grounds container 3
- Coffee spout 3
- Connecting an accessory 9
- Consistency of grind
 - Adjusting the grinder 13
 - Grinder adjustment switch 3
- Contact details 26
- Cup grille 3
- Customer support 26

D

- Damage
 - Preventing damage 5
 - What to do in the event of damage 4
- Declaration of Conformity 26
- Descaling
 - Machine 20
 - Water tank 22
- Display
 - Cockpit 8
 - Touch display 3
- Display messages 22
- Disposal 23
- Drip tray 3
 - Insert 3

E

- Emptying the system 23
- Errors
 - Troubleshooting 23
- Espresso 10
- Espresso doppio 12
- EU Declaration of Conformity 26

F

- Filler funnel
 - Filler funnel for ground coffee 3
- Filling
 - Bean container 6
 - Water tank 14

Filter

- Changing 18
- Inserting 18
- Filter casing 3
- Fine foam frother
 - Professional fine foam frother 3
- First-time use 6
- Flat white 11

G

- Grinder adjustment switch 3
- Ground coffee 12
 - Measuring spoon for ground coffee 3
 - Powder chute for ground coffee 3
- Grounding point 24

H

- Hotline 26
- Hot water 13
- Hot-water spout 3

I

- Insert for drip tray 3
- Instant coffee
 - Ground coffee 12
- Interchangeable milk spout 24

J

- JURA
 - Contact details 26

L

- Latte macchiato 11
- Lungo 12

M

- Macchiato 11
- Machine
 - Cleaning 19
 - Descaling 20
 - Rinsing 16
 - Setting up 6
- Machine settings 15
- Mains cable 3
- Maintenance 16
- Maintenance actions 14
- Measuring spoon for ground coffee 3
- Messages, display 22
- Milk 12
 - Connecting milk 8
- Milk foam 12
- Milk system 24
 - Clean 16
 - Professional fine foam frother 3
 - Syrup attachment 3, 10
- Milk system rinsing 16

P

- Powder chute
 - Powder chute for ground coffee 3
- Preparation 9, 11
 - Americano 12
 - Aroma Selection 9
 - Caffè latte 11
 - Cappuccino 11
 - Coffee 10
 - Espresso 10
 - Espresso doppio 12
 - Flat white 11
 - Ground coffee 12
 - Hot water 13
 - Latte macchiato 11

13 JURA contact details / Legal information

- Lungo 12
- Macchiato 11
- Milk 12
- Milk foam 12
- Speciality Selection 9
- Sweet latte 10
- Problems
 - Troubleshooting 23
- Product settings
 - Adjusting 13
- Professional fine foam frother 3
 - Dismantling and rinsing 17
- Proper use 4
- R**
 - RFID 24
 - Rinsing
 - Machine 16
- S**
 - Safety information 4
 - Service socket 3
 - Setting up
 - Setting up the machine 6
 - Speciality Selection 9
 - Spout
 - Hot-water spout 3
 - Sweet latte 10
 - Switching off 14
 - Switching on 14
 - Symbol description 4
 - Syrup attachment 3, 10

- T**
 - Tank
 - Water tank 3
 - Technical data 24
 - Interchangeable milk spout 24
 - Milk system 24
 - Tel 26
 - Touch display 3
 - Transport 23
 - Troubleshooting 23
- U**
 - Use, First-time 6
 - Users 4
- W**
 - Water hardness
 - Determining the water hardness 6
 - Water tank 3
 - Descaling 22
 - Filling 14
 - Wi-Fi 24
 - Wi-Fi Connect 3
 - WiFi Connect 9
 - WiFi connection 9
 - Wireless connection 9, 18, 24

13 JURA contact details / Legal information

JURA Elektroapparate AG
Kaffeeweltstrasse 10
CH-4626 Niederbuchsiten
Tel. +41 (0)62 38 98 233

- i** You can find additional contact details for your country at jura.com.
- i** If you need assistance with using your machine, you can find this at jura.com/service.
- i** Your opinion is important to us! Use the contact details at jura.com.

Directives

The machine complies with the following directives:

- 2014/35/EU – Low Voltage Directive
- 2014/30/EU – Electromagnetic Compatibility
- 2009/125/EC – Ecodesign Directive
- 2011/65/EU – RoHS Directive
- 2014/53/EU – Wireless Voltage Directive

A detailed EU Declaration of Conformity for your J8 twin can be found at jura.com/conformity.

Technical changes

We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colours of the machine. Some details of your J8 twin may vary.