



PROVIDA VARME

**BOOSTER™**  
POWERFUL HEATING

## USER MANUAL

### **BOOSTER II H 2000 W WHITE**

Product number: PVBO2H 2000W WHT

El no.: 5410061

NOBB no.: 60642414

GTIN: 7090048691332

### **BOOSTER II H 2000 W BLACK**

Product number: PVBO2H 2000W BLK

El no.: 5410060

NOBB no.: 60642412

GTIN: 7090048691325



**Congratulations on your purchase of a Booster II H 2000 W. Please read the following instructions carefully before use, and keep this user manual for future reference.**

#### **Before first use:**

- Read and follow all the instructions below, even if you feel confident about using the product.
- Remove all packaging and check that the product is intact. If you have any doubts, do not use the product and contact the retailer.
- Dispose of the packaging appropriately.
- Keep the box for seasonal storage.

**Make a note of the date when you received the product on the warranty page of this user manual, and attach the receipt.**

#### **Specifications for heater**

**Model no.: PVBO2H 2000W WHT – PVBO2H 2000W BLK**

**Power: 1400 W/2000 W Voltage: 220–240 V**

**Frequency: 50/60 Hz**

- Only use the voltage specified on the product.
- To avoid overheating and the risk of fire, do not cover the heater.
- Keep walls and other objects at least 1 metre away from the product's heating sides/long sides, and 50 cm away from the short sides.
- Do not use this product in places where fuel, paint or other flammable liquids are used or stored.
- This product gets hot during use. Do not touch the front of the product or the cover grille.

**WARNING: DO NOT COVER – This is important in order to avoid overheating.**

To reduce the risk of fire, electric shock, personal injury or damage to property:


- Before moving this product, switch it off and allow it to cool down.
- Do not insert any objects or metal tools into this product, as this may result in electric shock, fire or damage to the product.
- If this product accidentally comes into contact with water, switch off the power and do not touch the product.
- Do not use this product if the mains lead or plug is damaged, or if the product is not working correctly.
- Do not use this product with wet hands.
- Do not connect this product to the power until it is fully assembled and adjusted.
- This product is not intended for use outdoors.
- This product must always be placed on a flat surface.
- Ensure that the mains lead is not coiled before use. A coiled mains lead can result in overheating.
- Do not remove the plug from the electrical socket until you have switched off the product.
- When disconnecting this product from the power, always hold the plug and pull. Never pull the mains lead.
- This product is intended for normal domestic use, and is not intended for industrial use.
- This product must not be positioned directly in front of an electrical socket.
- Never remove the product's cover.
- This product must only be used as described in this user manual.
- Any other use that is not recommended by the retailer may result in fire, electric shock or personal injury.
- Inspect the heater for damage, paying particular attention to the heating elements and the mains lead.
- Do not use the heater if there is visible damage.

## ASSEMBLY INSTRUCTIONS

This product comes with wheeled feet.

1. Carefully turn the product upside down and position the base of the wheels over the screw holes on each side of the product.


2. Secure with the two screws supplied.

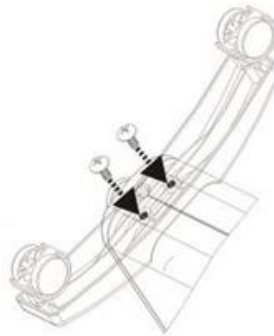

Stretch out the mains lead and insert the plug into an electrical socket. Check that the voltage on the specification plate is the same as in your home.

• Switch on the product by selecting

- a. **Power level I**
- b. **Power level II**

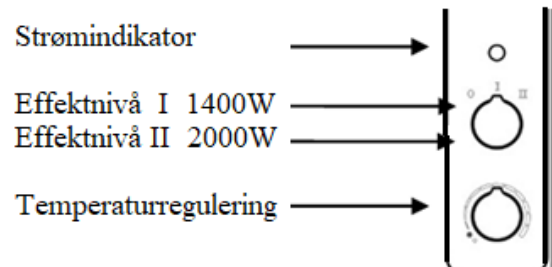

Then set the desired temperature by adjusting the temperature control.

The heater operates when both the power switch and the temperature control are activated.

The red power indicator lights up when the power switch is on and the temperature has been set.

## SAFETY

### Protection against overheating

- This product is equipped with overheating protection, which automatically switches the product off if it gets too hot.
- Overheating can occur if anything is too close to the product in front of the cover grille, or is lying over the product and covering it.
- If this happens, unplug the heater and let it cool down for 30 minutes. Remove all surrounding objects, and switch the product back on.
- The product should now work normally. If the problem persists, contact the retailer.

### Tip-over protection

- The heater is fitted with tip-over protection to switch off the heater if it tips over.
- If the heater tips over and the tip-over protection is activated, unplug the heater and be careful when standing it up again as it will still be hot.

## Cleaning and maintenance

**IMPORTANT:** Switch off the power switch and disconnect the plug from the electrical socket. Wait for the heater to cool down completely before cleaning.

- Vacuum clean the air vent and the cover grille to remove dust from these areas.
- To remove dust from the outside of the heater, use either a vacuum cleaner or a damp (but not wet) lint-free cloth that has been moistened with warm, soapy water.
- Do not spray with liquids.
- Do not attempt to clean the inside of this product with water.
- Do not attempt to open the heater.

## Storage

• This product should be stored in a dust-free place when not used for an extended period of time. It is best to store this product in the box it came in. Coil up the mains lead carefully to avoid damaging it.

## Warranty

**This product comes with a five-year warranty from the invoice date.**

Keep the invoice in a safe place, as this is your proof of purchase and warranty. If a fault is discovered during the warranty or complaint period, the product will be repaired free of charge. It is up to Provida Varme and/or the retailer to decide whether the product can be repaired or needs to be replaced. In order for the warranty to be valid, the product must be used and maintained in accordance with this user manual. If the product has been used incorrectly or not maintained, the warranty will not be valid.

## Disposal

This symbol indicates that the product is an electrical appliance, and should not be disposed of with ordinary waste. Return the product free of charge to the store, or take it to your nearest recycling centre.

## Customer service

- Contact Provida Heating and/or the retailer for support.
- Incorrect repairs may result in danger during operation.
- The warranty does not cover damage as a result of accidents, misuse, neglect or poor maintenance.
- In accordance with our guidelines for continuous product development, we reserve the right to alter the product and documentation specifications without notice.



Narverødveien 40, 3113 Tønsberg  
Tlf: 40 10 57 00  
E-post: [info@providavarme.no](mailto:info@providavarme.no)  
Web: [www.providavarme.no](http://www.providavarme.no)  
Web: [boosternordic.no](http://boosternordic.no)